



PLEASE READ THIS USER'S MANUAL THOROUGHLY BEFORE USE

USER MANUAL

OSCILLATING MULTI TOOL

MODEL NO.: 3939



SAFETY INSTRUCTIONS (Please keep these instructions)

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or other queries, please contact our Customer Services.

- The product should only be connected to a 240 V AC, 50 Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- Never use near flammable materials or gasses.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Wear protective goggles when operating.
- Remove any adjusting key or wrench before turning the tool on.
- Always turn off and unplug the power tool before making any adjustments, changing accessories or storing the tool
- Always ensure that the tool and accessories are properly maintained. Broken or worn parts may affect the operation and be a hazard.
- Always ensure that the accessories are sharp and clean for better control and cutting ability.
- Wear dust protection when using sanders. Breathing in the dust can be hazardous to your health.
- Do not overload the tool – allow the tool to do the work.
- Remove all foreign objects such as nails or screws from the workplace before sanding or cutting.

⚡ WARNING ⚡

To Reduce The Risk of Fire or Electric Shock, follow these basic precautions:

- Read all instructions before using this tool.
- Never allow children to operate or play with this tool.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this tool. The fumes can create a fire hazard or explosion.
- **UNPLUG OR DISCONNECT THIS TOOL FROM THE POWER SUPPLY BEFORE SERVICING.**

-Save these instructions-

USER INSTRUCTIONS (Please keep these instructions)

Product Details



- 1 – Oscillating Multi Tool
- 2 – Sanding Pad
- 3 – Sanding Sheets
- 4 – Scraper Blade
- 5 – 35mm HCS Saw Blade (wood)

- 6 – 35mm Bi-Metal Saw Blade (wood, plastic, metal)
- 7 – 32mm HCS Saw Blade – straight tooth (wood, plastic)
- 8 – 22mm HCS Saw Blade (wood, plastic)
- 9 – 35mm HCS Saw Blade – straight tooth (wood, plastic)
- 10 – 66mm HCS Saw Blade (wood, plastic)

Mounting Accessories

1. Unscrew the mounting bolt using the allen key and remove the flange.
2. Ensure that the tool holder tool holder and accessory are clean before mounting.
3. Mount the accessory onto the hex-shaped tool holder. Make sure that the accessory has a flush fit.
4. Replace the flange and tighten the bolt using the allen key.


Ensure that the mounting bolt and flange are secure and firmly tightened before use.

Mounting Sanding Sheets

1. Mount the sanding pad onto the tool holder.
2. Align the sanding sheet with the sanding pad.
3. Firmly press the tool with the sanding sheet against a flat surface and briefly switch the tool on. This provides a good adhesion and prevents premature wear.
4. If one edge of the sanding sheet has become worn; remove, rotate 120° and replace.

Operating Instructions

1. To switch the power tool on – slide switch (1) forward to “I”.
2. To switch the tool off – slide the switch (1) back to “O”.

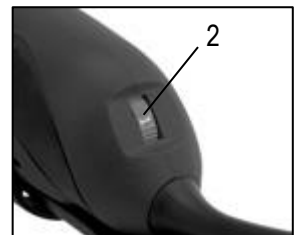

3. Select the oscillating speed whilst the tool is running.
4. Use the variable speed control (2) to set the optimum oscillating speed according to the accessory used and the respective application.

Sanding

For sanding select high oscillation speed. Sand with a constant movement and light pressure. Heavy pressure does not increase the removal – the sanding sheet merely wears faster.

Sawing and Cutting

For sawing and cutting, select high oscillation speed. The saw blade will last longer if the wear is distributed evenly.

Scraping

For scraping, select medium/high oscillation speed.

USER INSTRUCTIONS (Please keep these instructions)

Cleaning and Maintenance

WARNING: Before performing any work on the machine, switch off and unplug from the power source.

Regular inspection and cleaning reduces the necessity for maintenance operations and will keep your tool in good working condition.

The motor must be correctly ventilated during the tool's operation. For this reason, avoid blocking the air inlets.

Technical Data

Rated Voltage: 240V AC, 50Hz

Power: 300W

No-Load Speed: 10000-22000rpm

Grinding Wheel Max. Thickness: 12.7mm

Sound Pressure L_{PA} : 86.3dB(A)

Sound Power L_{WA} : 97.3dB(A)

Uncertainty K: 3dB(A)

Weight: 1.48kg

Disposal of Unit

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



An Official Oypla Branded Product



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX