



Out of this world savings.

User Manual

Model: 3972



Swingball Set

CE

UK
CA

Contents

Safety Information	2
What's In The Box?.....	3
Assembly Instructions.....	3

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Before using this product, make sure all fastenings are tightly in place and that everything is in order. Check periodically by an adult.
 - This product is a toy and should only be used by children of its intended age range.
 - Not suitable for children under 36 months.
 - Do not carry out alterations or modifications to this product.
 - Leaving the swing ball set outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover
 - Children should be supervised at all times when using this product.
 - Clean only with a damp cloth. Do not use strong industrial cleaning substances.
 - Players must stand outside the arc of travel to avoid being hit by the ball.
 - Do not discard of any packaging until you have checked that you have all of the parts and fittings required.
 - This product is for domestic use only.
 - This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
 - If the product is damaged or has any defects, please contact cservice@oypla.com
-

What's In The Box?

Please note that you will be referring to the below parts list during assembly

If any of the below parts are missing or damaged, please contact our dedicated team at cservice@oypla.com.

	Top Pole 1pc		Middle Pole 1pc		Bottom Pole 1pc
2pcs					1pc

Assembly Instructions

Please refer to the below information to help assemble your Oypla product

If you require assistance with the assembly of your Oypla product, please contact our dedicated team at cservice@oypla.com.

ASSEMBLY DIAGRAM CONTINUES ON THE FOLLOWING PAGE

Stage 1:


Slot the top pole of the swing ball set into the middle pole.

Stage 2:

Attach the bottom pole to the other side of the middle pole.

Stage 3:

Tie the rope (with the ball) to the end of the metal pole at the top of the top pole. The rope can be shortened by tying a knot at the top.

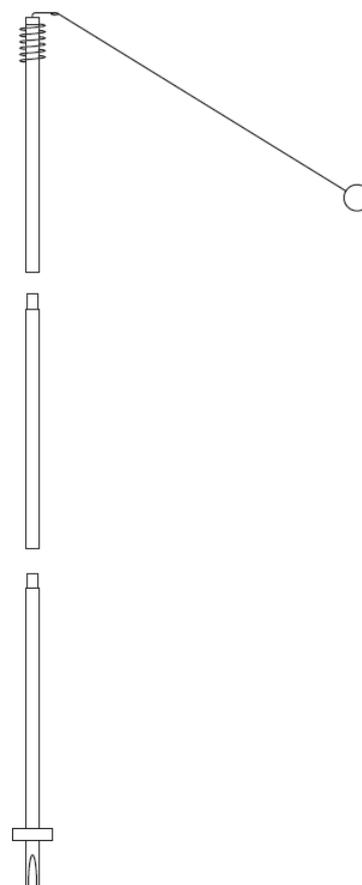

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual

Model Code: 3972

Oypla.com LLP / cservice@oypla.com