

Out of this world savings.

User Manual

Model: 3982



Disco Ball

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using this product. This should be checked periodically by an adult.
- Unpacking and installing the ball is to be completed by an adult.
- Do not carry out alterations or modifications to this product.
- Clean only with a damp cloth. Do not use strong abrasive or industrial cleaning substances.
- Never allow children to try and swing on the disco ball. Doing so may result in serious personal injury.

- Remove from mount before cleaning.
- This product is for domestic use only.
- Carry and transport this product with care. Dropping this product may result in serious product and/or personal damage.
- This product is intended for indoor use only.
- Do not discard any of the packaging until you have checked that you have all of the parts required.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product Imported by Oypla.com LLP, Uxbridge, UB8 2FX