



PLEASE READ THIS USER'S MANUAL THOROUGHLY BEFORE USE

USER MANUAL INSTANT WATER BOILER

MODEL NO.: 3986



SAFETY INSTRUCTIONS (Please keep these instructions)

Please read the entire instruction manual before using the product and then save it for future reference. We reserve the right for any errors in text or images and any necessary changes made to technical data. In the event of technical problems or other queries, please contact our Customer Services.

- The product should only be connected to a 230 V AC, 50 Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Never move the product by pulling on the lead.
- Do not touch the water spout whilst the appliance is in operation.
- Do not use the appliance to heat anything other than water.
- Do not fill above the "MAX" mark. Do not operate if the water is below the minimum level.
- Do not fill the boiler when it is connected to the mains supply.
- Beware of steam coming from the lid, especially during refilling.
- Always sit the boiler on a clean, flat surface.
- Do not allow the water to sit in the boiler for long periods of time. Empty the water out at regular intervals.

⚡ WARNING ⚡


To Reduce The Risk of Fire or Electric Shock, follow these basic precautions:

- Read all instructions before using the water boiler.
- Never allow children to operate or play with the water boiler.
- Never overfill the boiler beyond the "MAX" mark.

-Save these instructions-

USER INSTRUCTIONS (Please keep these instructions)

Product Details

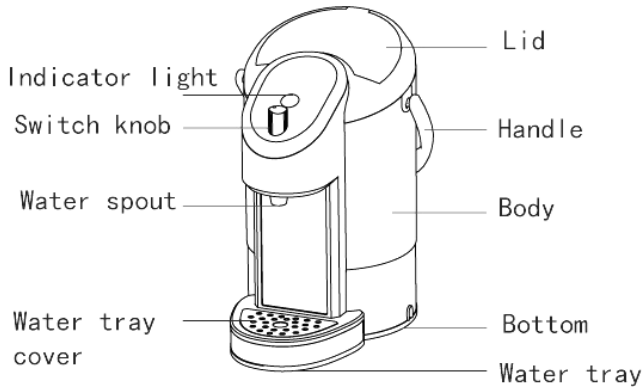

Before First Use

Before using the appliance, rinse out the inside with warm water (without detergent).

Operating Instructions

1. Open the tank lid and fill with the desired amount of water, taking care not to fill past the "MAX" level indicator.
2. Close the lid and plug the water boiler into the plug socket.
3. Put the cup on the water drip tray and align with the spout.
4. Turn the knob to the "On" position. The green indicator will light and boiling water will pour from the spout continuously for 5-8 seconds.
5. Once the desired amount of water has been dispensed, turn the knob to the "Off" position. The indicator light will turn off at the same time.

Care and Maintenance

Always disconnect the boiler from the mains supply and leave to cool before cleaning.

1. The outside of the appliance can be cleaned by a moist cloth and a small amount of non-abrasive detergent.
2. Do not use any harsh cleaners, scouring pads, or solvents to clean any part of the boiler.
3. Never immerse the boiler in water.
4. Dry the appliance with a dry cloth after cleaning.
5. When full, remove the drip tray and empty it.

Descaling

Minerals can build up and clog the appliance, reducing its efficiency. This build up will vary depending on the hardness of the water in your area. Descale the boiler regularly using a proprietary brand of descaler. Follow the manufacturer's instruction on the pack of the descaler. Failure to descale will shorten the life of your boiler.

WARNING: The appliance must be free from descaling treatment before use.

Disposal of Unit

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill, please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



An Official Oypla Branded Product



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX