



Coffee Grinder

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- The product should only be connected to a 220-240V AC, 50Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Never move the product by pulling on the lead.
- Never immerse the appliance in water.
- Ensure that the appliance is placed on a stable work surface.
- This product is not intended for use by persons (including children) with reduced physical, mental and sensory capacities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by persons responsible for their safety.
- Wait at least one minute between grinds to prevent overheating.
- Do not discard any packaging until you have checked that you have all of the parts and fittings required.
- Do not use the grinder to grind oily beans, peanuts or other items that are too hard.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

1. Remove the lid. Using the measuring mark on the lid, measure the desired amount of coffee beans. Do not fill over the maximum mark.
2. Empty the beans into the grinding container and close the lid. Ensure the lid is correctly fitted by matching the mark on the lid with the mark on the grinder.
3. Press the button to operate the grinder. The grinder has a pulse mode, to continue grinding keep pressing the button.
4. Once the desired consistency has been reached, stop pressing the button and open the lid to pour the grounds.



An Official Oypla Branded Product



Correct Disposal of this product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.