

Out of this world savings.

User Manual Model: 3996, 3997



Bubble Fish Lamp

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- Do not attempt to fill beyond the 'MAX' line, only fill with the designated amount (90cm or 120cm of water).
- Do not pull the bubble adjustment screw as this will cause water to leak, creating a safety hazard.
- This product is intended for indoor use only.
- Children should be supervised at all times around this product.
- Keep all of the packaging until after a successful installation and retain instructions for future use.
- To protect against electrical shock, do not immerse the cord or plug in water or any other liquid.
- This product is not suitable for live fish.
- Only set the lamp up on stable, level and dry ground.
- Check for leaks when first assembled and on a regular basis.
- Disconnect the lamp from the mains after use.

- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Clean only with water and mild soap. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- Unpacking, installing and fixing the parts are to be completed by an adult.
- This product is not intended for use on carpeted surfaces.
- Avoid leaving the product unsupervised.
- If the product is damaged or has any defects, please contact cservice@oypla.com
- This product contains moving parts

 some noise and vibration is to be expected.
- The lamp is designed for decorative purposes only, and is not intended to be a source of household illumination.
- Do not use the lamp if the power cord is damaged.

Operating Instructions

The below information is designed to help you with the operation of your Oypla product

If the product is damaged, defective or you require more information, please contact our dedicated team at cservice@oypla.com.

The carton should contain:

- 1 x LED Bubble Light Tower
- 1 x Assortment of 9 Coloured Fish
- 1 x Power Cord and Plug

Operation

- Place the empty LED bubble light tower into an empty space, making sure that electrical appliances and plug sockets aren't in the tower's immediate radius.
- Take the power cord and insert it into the power component found in the base of the tower (on the opposite side to the bubble adjustment screw. Do not put the plug into a socket at this stage.
- Remove the lid from the LED bubble light tower and begin to pour water in. Be sure to not exceed the maximum fill limit as this will cause the tower to spill when the bubbles are activated.
- Once you have filled the LED bubble light tower, you can drop the assortment of coloured fish into the tower. After this, place the lid back onto the tower.
- Put the plug into an available plug socket, making sure that the plug socket is a reasonable distance from the LED bubble light tower to avoid spillages and potential health and safety hazards.
- Once the LED bubble light tower is on, turn the bubble adjustment screw to set the rate of which the bubbles come out. Turn right to heighten the amount of bubbles and turn left to lower the amount of bubbles. Do not pull on the bubble adjustment screw as this will cause it to come out and for water to spill, creating a health and safety hazard.

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product Imported by Oypla.com LLP, Uxbridge, UB8 2FX

> **User Manual** Model Code: 3996, 3997 Oypla.com LLP / cservice@oypla.com