

User Manual Model: 0040

Convector Heater

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Do not use the heater unless the feet are correctly attached.
- Ensure the power supply to the socket into which the heater is plugged is in accordance with the rating label on the heater and that the socket is earthed.
- Keep the power cord away from the hot body of the heater.
- WARNING! Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Indoor use only.
- Do not place the heater on carpets having a very deep pile.
- Always ensure that the heater is placed on a firm level surface.
- Do not place the heater close to curtains or furniture in order to avoid a fire hazard.
- WARNING! Do not place the heater immediately below a socket-outlet.
- Children should be supervised to ensure that they do not play with the appliance.
- If the product is damaged or has any defects, please contact <u>cservice@oypla.com</u>
- When cleaning the heater, always ensure it is unplugged and it has been given time to cool down fully.
- Only use a cloth to dry the heater, do not use liquids or abrasive chemicals.


- Do not insert any object through the heat outlet or air grilles of the heater.
- Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- Always unplug the heater when moving it from one location to another.
- WARNING! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- WARNING! Never use this product plugged into an extension reel.
- When the heater is not used for long periods of time, it should be protected from dust and stored in a clean, dry space.

Operating Instructions

The below information is designed to help you with the operation of your Oypla product

If the product is damaged, defective or you require more information, please contact our dedicated team at cservice@oypla.com.

Before using the heater, the feet must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side mouldings.

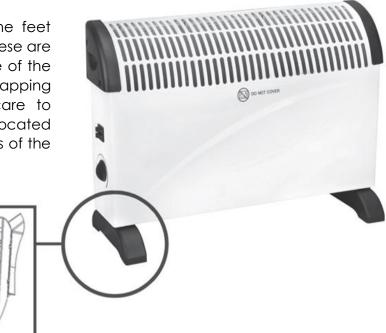

Note: It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time to emit some smell and fumes. This will disappear when the heater has been on a short while.

Operating your Heater

- Choose a suitable location for the heater and insert the plug of the heater into a suitable socket.
- Turn on the thermostat knob fully in a clockwise direction to the maximum setting
- Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on. When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-clockwise until the thermostat is heard to click off and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.
- In its minimum (fully anti-clockwise) position, the thermostat provides a frost guard position. In this position (depending on the size of the room) the heater will maintain the temperature above freezing.

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product Imported by Oypla.com LLP, Uxbridge, UB8 2FX