



LEISURE

THANK YOU FOR YOUR ORDER



*Size will vary depending on model.

Wooden Tripod Easel

USER MANUAL Model No: 4003, 4004

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product
- Size may vary depending on model.
- Keep fingers, loose clothing, and hair away when folding the product.
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- Before using the product, make sure all fastenings are tightly in place and that everything is in order, and checked periodically by an adult.
- Children should be supervised at all times when using the product.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- When assembling be very careful not to excessively tighten the bolts as this may cause damage to the product.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- If the product is damaged or has any defects, please contact cservice@oypla.com

















Assembly Instructions

Parts List:


Please check you have all parts below before attempting to assemble this product.

If you are missing any of the below parts, please contact Oypla customer services:


cservice@oypla.com

Bottom Bar [1pc]	Top Bar [1pc]	Bolt [4pcs]	Wing Nut [7pcs]
			
Hinge [1pc]	Small Cross Bar [1pc]	Large Cross Bar [1pc]	
			
Large Bolt [2pcs]	Large Screw [4pcs]	Small Screw (2pcs)	Bracket [2pcs]
			
Hinge Support [2pcs]		Back Frame [1pc]	
			
Side Frame [2pcs]		Support Frame [1pc]	
			
		Thin Bolt (1pc)	

1. Slot the **Large Cross Bar** onto the bottom of the **Back Frame**, before slotting into place. Then, align the **Small Cross Bar** with the **Back Frame** and slot into place. This should result in having a completed back frame piece with the smaller cross bar and the longer cross bar connected.

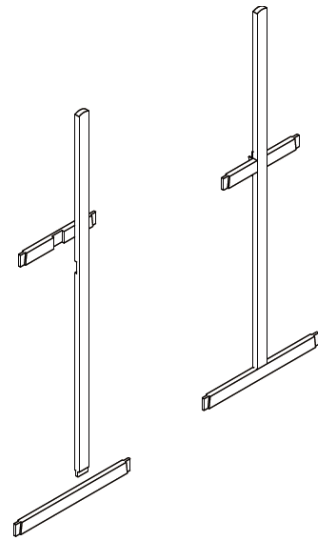


2. Align the two **Side Frame** pieces with in correspondence with the **Small Cross Bar** and **Large Cross Bar** ends, and slot into place. The *flat* end of the **Side Frame** pieces should be at the bottom, now underneath the **Large Cross Bar**. Fasten these into place using **Large Screws**.

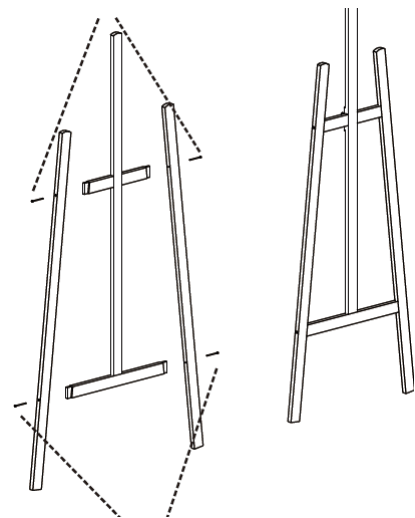


3. Using the two **Small Screws** provided, attach the **Hinge** to the cross-section between the **Small Cross Bar** and the **Back Frame**. This should be done so that the two sides that “stick out” should be *vertical*. Then, using the **Thin Bolt**, secure the **Support Frame** to the **Hinge**.



4. Using the two **Large Bolts** provided, attach the **Hinge Supports** by aligning one of the holes with the slot in the **Support Frame**, and the other end aligned to the hole just under the cross-section of the **Back Frame/Small Cross Bar**, on the **Back Frame**. The gradient of the product can then be adjusted to the user’s wish.

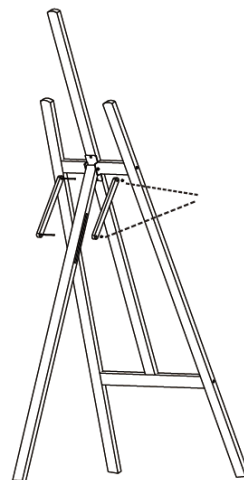

5. Using the four remaining **Bolts**, attach both the **Bottom Bar** and the **Top Bar**. Both of these require connection to a **Bracket** using a **Bolt** through the aligning holes. The bars can be applied at different heights to suit the user's wish.

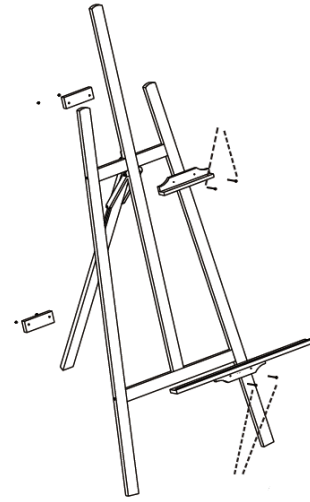

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4003, 4004