




PLEASE READ THIS USER'S MANUAL THOROUGHLY BEFORE USE

USER MANUAL FLOOR SWEEPER MODEL NO.: 4009

Assembly

1. Slide the handle grip (D) onto the top section of the handle (A).
2. Screw on the centre section (C) and then the bottom section (B).
3. Screw the assembled handle onto the sweeper body.

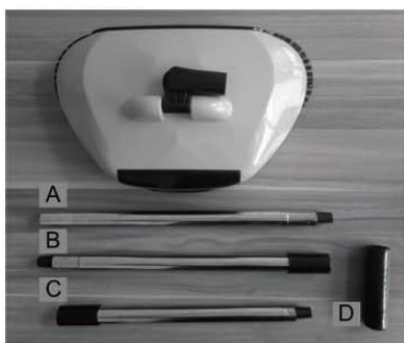

Operation

Holding the handle firmly, push down gently to drive the sweeper forward, using the arrows as a guide to pick up dirt and debris. The sweeper is designed to only be used in a forward motion.

Emptying the Sweeper & Maintenance

- To empty the sweeper, hold the sweeper over a bin. Lift the door on the back of the sweeper and empty.
- To keep the sweeper working smoothly, use the included hand brush to clean the centre brush of any trapped dirt and debris.

