

HOME

User Manual

Model Code: 4024,
4025, 4029

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 4 Fitting
Instructions
-
- 5 Operating
Instructions
-
- 6 Cleaning and
Care
-
- 6 Technical
Information
-
- 7 Back Cover



Heated Blanket

Contents

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

1 Front Cover

-

2 Safety Instructions

-

4 Fitting Instructions

-

5 Operating Instructions

-

6 Cleaning and Care

-

6 Technical Information

-

7 Back Cover

End

- Use this electrical appliance as described in this manual. Any other use is not recommended by the manufacturer and could have a detrimental effect on the durability of the appliance and or the safety of the user.
- Never leave this appliance unattended whilst in use.
- Do not let the cord hang over the edge of a table, or come into contact with a hot surface.
- If abnormal noise, smell, smoke or any other failure is discovered during operation, turn off the product and unplug the power plug. Then contact the service centre for repair.
- This appliance is not intended for the use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given appropriate supervision and instructions to use the equipment by a person responsible for their safety.
- The appliance is not intended for medical usage; it is only intended for indoor household use.
- Do not cover or trap the controller under the pillow, mattress or blanket. Always check that the blanket and lead are not trapped. Do not tuck the blanket under the mattress.
- Do not insert pins or sharp objects into the blanket.
- Unplug the electrical power cord when the blanket is not in use.
- Do not use a hot water bottle while using the blanket.
- Please inspect the unit for damage after unpacking.
- Repairs should only be performed by qualified personnel. Improper repairs may place the user and/or equipment at serious risk.
- Do not operate this appliance with a damaged plug, or cord, after a malfunction, or after being dropped or damaged in any way. If the product is damaged or defective, please contact cservice@oypla.com
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.
- Do not remove the appliance from the mains power supply by pulling the cord, pull the plug instead.
- This product is not a toy. Never leave the equipment within reach of children. Close supervision is required when using this equipment near children.
- The blanket should not be used by people that are insensitive to heat.
- Do not use the appliance on an adjustable bed, sofa beds or inflatable beds.
- Use the attached support ties to secure the product to the mattress.
- Only operate with the supplied lead and controller.
- Do not turn the blanket on when it is folded or creased.
- Do not use the power or the control with wet hands to prevent an electric shock. Do not use when wet or around liquids including bathtubs and showers.

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
4	Fitting Instructions
-	-
5	Operating Instructions
-	-
6	Cleaning and Care
-	-
6	Technical Information
-	-
7	Back Cover

End

- When storing the blanket, allow it to cool down fully before folding it. Do not crease the appliance by placing items on top of it during storage. Examine the appliance frequently and prior to use after storage.
- Ensure the equipment is not too close to heat emitting appliances or placed in direct sunlight.
- The appliance must not be used in potentially dangerous locations such as flammable, explosive, or wet atmospheres where petrol, flammable liquids, or chemicals are used or stored.
- Avoid extreme degrees of temperature, either hot or cold. Place the device well away from heat sources such as radiators or gas/electric fires.
- Always store the appliance in a dry location.
- Do not use a hot water bottle while using the blanket.
- Do not use this equipment for anything other than its intended use.
- Do not immerse the controller in water or any other liquid.
- Never use harsh or abrasive cleaning fluids on the device.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Position the power lead in such a way to prevent it coming into contact with heat.
- The warnings and precautions in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator, that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.



Gentle washing cycle at a maximum of 40°C



Do not iron



Do not tumble dry



Do not insert pins or needles



Do not dry clean



Not suitable for children under the age of 3



Do not bleach




Do not use when folded

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
4	Fitting Instructions
-	-
5	Operating Instructions
-	-
6	Cleaning and Care
-	-
6	Technical Information
-	-
7	Back Cover

End

Fitting Instructions

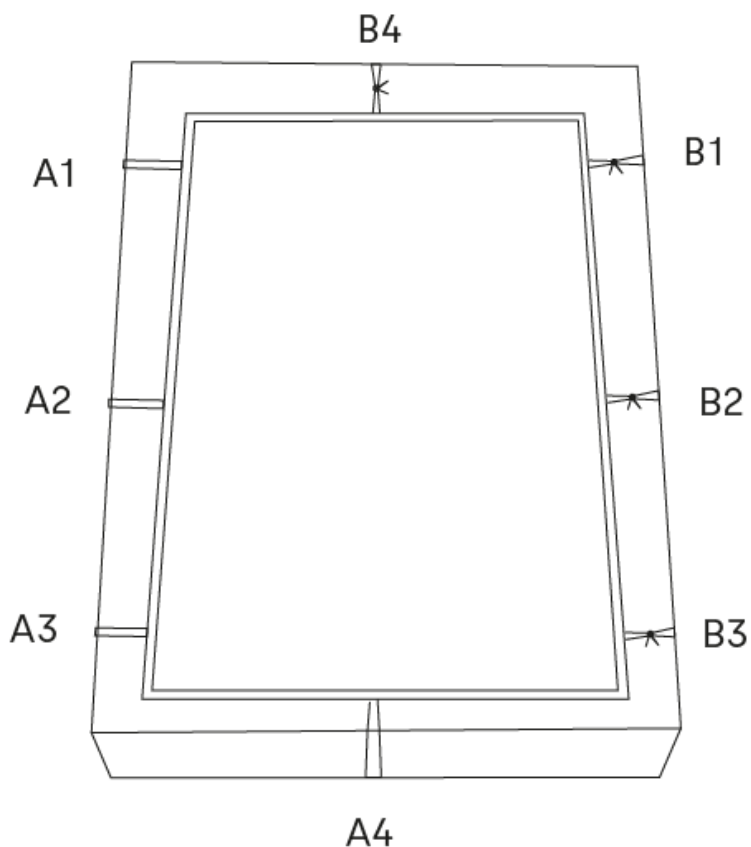

- Unfold the blanket and spread it out on the bed above your mattress.
- Align the blanket, so that the socket for the lead and controller are at the foot of the bed.
- Use the support ties to secure the product to the mattress, as shown in the figure below:
- Take the support tie at point A1 and place it underneath the mattress to connect it to the support tie at point B1 with a secure knot. Repeat this with the support ties from A2 to B2, A3 to B3 and A4 to B4.
- Ensure that your electric blanket is positioned correctly.
- Once the blanket is secure, connect the controller to the mattress.
- Place your bed sheet over the electric blanket.


Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
4	Fitting Instructions
-	-
5	Operating Instructions
-	-
6	Cleaning and Care
-	-
6	Technical Information
-	-
7	Back Cover

End

Operating Instructions

- Once the blanket has been securely fitted to the bed, plug the power lead into the closest socket at the foot end. Use an extension lead where necessary to ensure the power cord is not stretched and cannot be tripped over.
- This product is designed to pre-heat your bed to the desired temperature using the temperature control settings on the supplied controller. The numbers on the controller represent the heat settings shown on page 9.
- Move the heat setting on the controller to the desired heat setting in order to pre-heat your bed.
- The blanket will start to heat after a few minutes providing it is covered with a duvet or blanket.
- Allow 15-20 minutes for the blanket to begin warming up and approximately 60-90 minutes for the blanket to reach the maximum temperature. This time will vary depending on the temperature of the room, the type of bedding used and the thickness of the covering blanket or duvet.
- Note: If using the blanket all night, use it only on setting 1. This will provide a safe and comfortable temperature for all-night use.

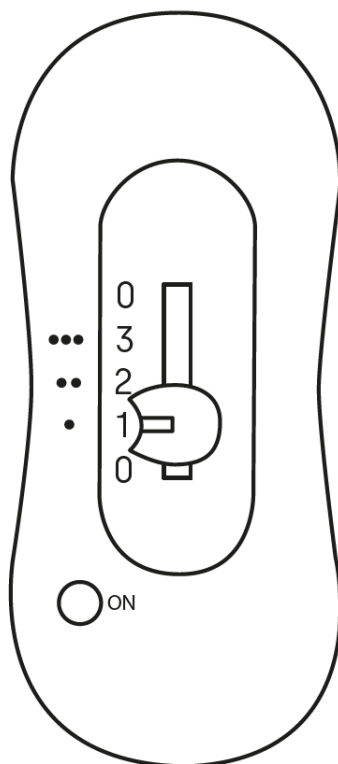

0 = OFF

1 = LOW HEAT

2 = MEDIUM HEAT

3 = HIGH HEAT

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
4	Fitting Instructions
-	-
5	Operating Instructions
-	-
6	Cleaning and Care
-	-
6	Technical Information
-	-
7	Back Cover

End

Cleaning & Care

Please refer to the instructions below in regards to cleaning and maintaining your product.

- Note: The blanket can be washed but never dry cleaned.
- When hand washing, use a mild washing powder or detergent and warm water. Soak for 5 minutes and gently wash and rinse thoroughly in clean water.
- It is recommended to air-dry the blanket.
- Always ensure the blanket is 100% dry and has returned to its original size before use.
- Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the retailer prior to any further use.
- Always disconnect the controller and the power lead from the blanket before washing.
- For machine washing, wash at a gentle cycle at a maximum of 40°C.
- Do not pinch the wired areas of the blanket as this will damage the internal circuit.
- Never wring the blanket.
- During use, checks should be regularly carried out to ensure the electric blanket is levelled, fitted firmly and not folded or rolled.
- The heating wire in the electric blanket should be spaced evenly and smoothly with no crossing, and no folds between wires.

Technical Information

- Power Supply: 220 – 240 V ~50 Hz
- Power: 40 W (4024) | 75 W (4025) | 120 W (4029)

Contents

- 1 Front Cover
 -
 - 2 Safety Instructions
 -
 - 4 Fitting Instructions
 -
 - 5 Operating Instructions
 -
 - 6 Cleaning and Care
 -
 - 6 Technical Information
 -
 - 7 Back Cover
- End



HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

