

HOME

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 3 Operating
Instructions
-
- 4 Cleaning and
Care
-
- 5 Back Cover

End



Electric Overblanket

Contents

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

1 Front Cover

-

2 Safety Instructions

-

3 Operating Instructions

-

4 Cleaning and Care

-

5 Back Cover

End

- This appliance must be used only for the purpose for which it was designed for, for home use. Any other use is considered not compliant with the intended use and therefore dangerous.
- After unpacking your overblanket, please make sure that it is intact, with no signs of damage. If in any doubt, do not use the appliance and contact cservice@oypla.com for further guidance.
- Before connecting the appliance to the mains supply, make sure that the voltage and frequency indicated on the technical data of the appliance correspond to those of the mains supply. The rating is on the appliance or on the power supply unit.
- Always disconnect the appliance from the mains supply before cleaning or performing maintenance and when the appliance is not in use.
- Regularly examine the appliance for signs of wear or damage. If the appliance has been misused or does not work, contact cservice@oypla.com before switching it on again.
- If the supply cord is damaged, take the whole appliance to an authorised technical service centre for the replacement of the control unit, to prevent all risks.
- If the appliance is used on an adjustable bed, check that the throw and cord do not become trapped or rucked, for example in hinges.
- Never use the appliance with wet or damp hands or feet.
- Never pull the power cable or the appliance itself to remove the plug from the socket.
- If the appliance is faulty or malfunctions, switch it off and do not tamper with it. Contact an authorised service centre for any repairs.
- Do not tuck the appliance in.
- This appliance is only to be used with the types of detachable control EN unit that are marked on the appliance.
- Children under the age of 3 should not use the heated appliance due to their inability to react to overheating.
- Children under 8 should only use the appliance if they are supervised by an adult with the control always set to minimum temperature, recommended as heat setting 1.
- Children aged 8 years and above or people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use the appliance if they've been given supervision or instruction on how to use it safely.
- The heated overblanket shouldn't be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- This appliance can give rise to the risks of entanglement, strangulation, tripping or treading if not safely arranged. Keep cords out of reach of young children and securely and safely out of the way.
- This appliance is not intended for medical use in hospitals, only home use.
- Never insert pins or needles into the appliance.
- Never use the appliance if it is wet or damp.
- When storing the appliance, allow it to fully cool before folding.
- **WARNING:** Never crease the appliance by placing items on top of it during storage.
- **WARNING:** for use, cleaning, maintenance and storage of the appliance, please follow the instructions specified in this booklet.
- Do not use this appliance to warm animals.

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Operating Instructions
-	-
4	Cleaning and Care
-	-
5	Back Cover

End

Operating Instructions

Please refer to the information below for instructions on how to operate your product.

SETUP

- Open the heated throw out fully to check for any damage before spreading it out over your sofa, armchair or bed. Ensure that the throw connector is at the foot position.
- Connect the mains lead to the heated throw's socket.
- Place the throw over you without wrapping it tightly and without sitting on it, as this may cause the overheat protection system to activate.

TEMPERATURE CONTROL

- Start by sliding the switch from OFF to ON to turn the appliance on.
- To select your heat setting, press the menu button until the heat light illuminates. Then, press the + or – button until you reach your required setting.
- The heated throw has 10 heat settings. Setting 1 is the lowest heat, and setting 10 is the highest heat setting. The appliance will automatically set the heat to 0 when it's turned on.

SETTING THE TIME LENGTH

- The appliance has an automatic shut off timer for 1 to 10 hours.
- Press the menu button until the timer light illuminates. Then, press the + or – buttons until you reach your desired time setting.
- Setting 1 means that the appliance will automatically switch off after 1 hour, 10 means it will switch off after 10 hours.
- **NOTE:** Ensure that the throw is draped over you to judge the temperature accurately, do not rely on a hand placed on the throw.
- **NOTE:** Ensure that the mains cable is not bent, kinked, trapped or damaged during operation.

*When a timer is set, you may have to hold the "Menu" button in order to change the timer or the heat setting.

Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Operating Instructions
-	-
4	Cleaning and Care
-	-
5	Back Cover

End

Cleaning & Care

Please refer to the instructions below in regards to cleaning and maintaining your product.

- Always disconnect the appliance from the mains supply and disconnect the control connector from the throw before cleaning or performing maintenance.
- To machine wash, place the throw in the washing machine on a 40°C wool cycle. Once your throw is washed, don't wring it out. Gently, but firmly, squeeze as much excess water out as you can.
- Pre-treat any stains by spot cleaning before placing in the washing machine.
- Use only the delicate cycle for spinning. Do not make an additional spinning cycle.
- Make sure the plug, mains lead, heated throw socket and controller remain undamaged, with no bare wire showing.
- Make sure the wiring of the heated throw isn't sticking out of the fabric anywhere.
- Make sure that the throw has completely cooled before folding or rolling it up to store. Don't fold it too tightly or put heavy things on top of it, as this could damage the wiring.
- The heated throw can be washed by hand or in the washing machine on a 40°C wool cycle.
- To hand wash, fill a large bowl or a bath with warm water and mild detergent or washing powder. Leave the throw to soak for 5 or so minutes, then gently wash. Rinse in clean water until the water runs clear.
- The best place to try the throw is on the washing line. Gently reshape it while it's damp, then hang it up, being careful not to peg any wired areas. Make sure it's completely dry before using it.
- Never iron the throw.
- If there are signs of wear or damage, if the throw has been misused or doesn't work, contact cservice@oypla.com before using it again.
- If the throw has been washed, ensure that it is completely dry before folding it and storing it.
- It is advised to store the throw in the original packaging that it was supplied in where possible.
- The throw should only be stored in a dry place.

Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 3 Operating Instructions
-
- 4 Cleaning and Care
-
- 5 Back Cover
- End



HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Model Code: 4042

OYPLA

Imported by Oypla.com LLP, Uxbridge, UX8 2FX

Oypla.com LLP / www.oypla.com