

LEISURE

THANK YOU FOR YOUR ORDER

Contents

- 1 Front Cover
 -
- 2 Safety Instructions
 -
- 2 Assembly Instructions
 -
- 3 Assembly Instructions
 -
- 4 Back Cover

End



2 Wheel Shopping Trolley

Contents

1	Front Cover
-	
2	Safety Instructions
-	
2	Assembly Instructions
-	
3	Assembly Instructions
-	
4	Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product should only be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Make sure that the bag is secured to the frame correctly before loading items in, this is so that there's no risk of the bag detaching during movement.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Regularly check the wheels to ensure they are secure, if they are loose, be sure to push them into the spoke.
- Ensure that the bag is able to close securely with no items overflowing or causing bulges.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

Assembly Instructions

Parts List:

- If you are missing any of the below parts, please contact cservice@oypla.com
- Please be aware that you will be referring to this parts list throughout the assembly process.



Contents

- 1 Front Cover
-
- 2 Safety Instructions
-
- 2 Assembly Instructions
-
- 3 **Assembly Instructions**
-
- 4 Back Cover

End



To start, remove the black end part and simply push on one of the wheels until you hear it click. To test it is secure, try pulling them off and if it comes off then it wasn't attached correctly. This is because the button has to be pressed for it to come off. Once done, repeat with the last wheel on the other side.



Now, simply pull (unfold) the circled bar down as seen in the photo to the right.



For this step, simply pull the back sleeve of the bag over the handle frame as seen in the photo to the left.

Lastly, pull the Velcro strap on the bag over the top of the handle and stick on the back of the bag as seen in the photo to the right.



Contents

- 1 Front Cover
-
- 2 Safety
Instructions
-
- 2 Assembly
Instructions
-
- 3 Assembly
Instructions
-
- 4 Back Cover

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT