

GARDEN

THANK YOU FOR YOUR ORDER

Contents

- 1 **Front Cover**
-
- 2 Safety/Warning
Instructions
-
- 3 Assembly
Instructions
-
- 3 Operating
Instructions
-
- 4 Back Cover

End



Lawn Trimmer

Contents

1	Front Cover
-	-
2	Safety/Warning Instructions
-	-
3	Assembly Instructions
-	-
3	Operating Instructions
-	-
4	Back Cover

End


Safety Instructions


Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product includes small parts that could cause choking.
- When using the product, use both handles to assure the product remains stable.
- Leaving the product exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- This product is intended for outdoor use only.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com.

Warnings

 This product contains small parts. These can be a choking hazard. Keep AWAY from children.

 This product contains sharp edges. Beware of these parts and consider wearing appropriate PPE.

Contents

1	Front Cover
-	
2	Safety/Warning Instructions
-	
3	Assembly Instructions
-	
3	Operating Instructions
-	
4	Back Cover

End

Assembly Instructions

Assembly Instructions:

To assemble the edging tool, simply remove the wing nut from the handle half, slot the blade half and the handle half together, and re-insert the wing nut. Tighten the wingnut but be careful not to overtighten it and damage it.

Operating Instructions:

- Wheel the Lawn Edger along the edge of your lawn, whilst doing this the steel blade trims the over-hanging grass as you go along.
- After every use, clean the edging blade with care, Wipe Clean Only.
- For the best results, use the edging cutter against a hard edge such as paving or decking.
- Care and practice may be needed when using against flower beds and also soft edges.

Contents

- 1 Front Cover
-
- 2 Safety/Warning
Instructions
-
- 3 Assembly
Instructions
-
- 3 Operating
Instructions
-
- 4 **Back Cover**

End

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
 Email: cservice@oypla.com
 Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT