

OYOLATM GARDEN



4 Pack Gazebo Weights

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.


- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for outdoor use only.
- This product is not for commercial use.
- Only use this product on stable, level and dry ground.
- Before using the product, make sure all fastenings are tightly in place and that everything is in order, and checked periodically by an adult.
- Keep fingers, loose clothing, and hair away when assembling the product as there are pinch, crush and shear points when fixing the products together.
- Only fill the product with sand. Do not fill the product with hot or flammable liquids or small stones/sharp edges.
- Two people should assemble the gazebo weights due to the weight once filled.
- Empty the gazebo weights before moving or storing. Cold weather can cause water inside the gazebo weights to freeze
- Leaving the product outside exposed to weather, especially direct sun, rain and salt air, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Assembly Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com

Please be aware you will be referring to this parts list throughout the assembly process

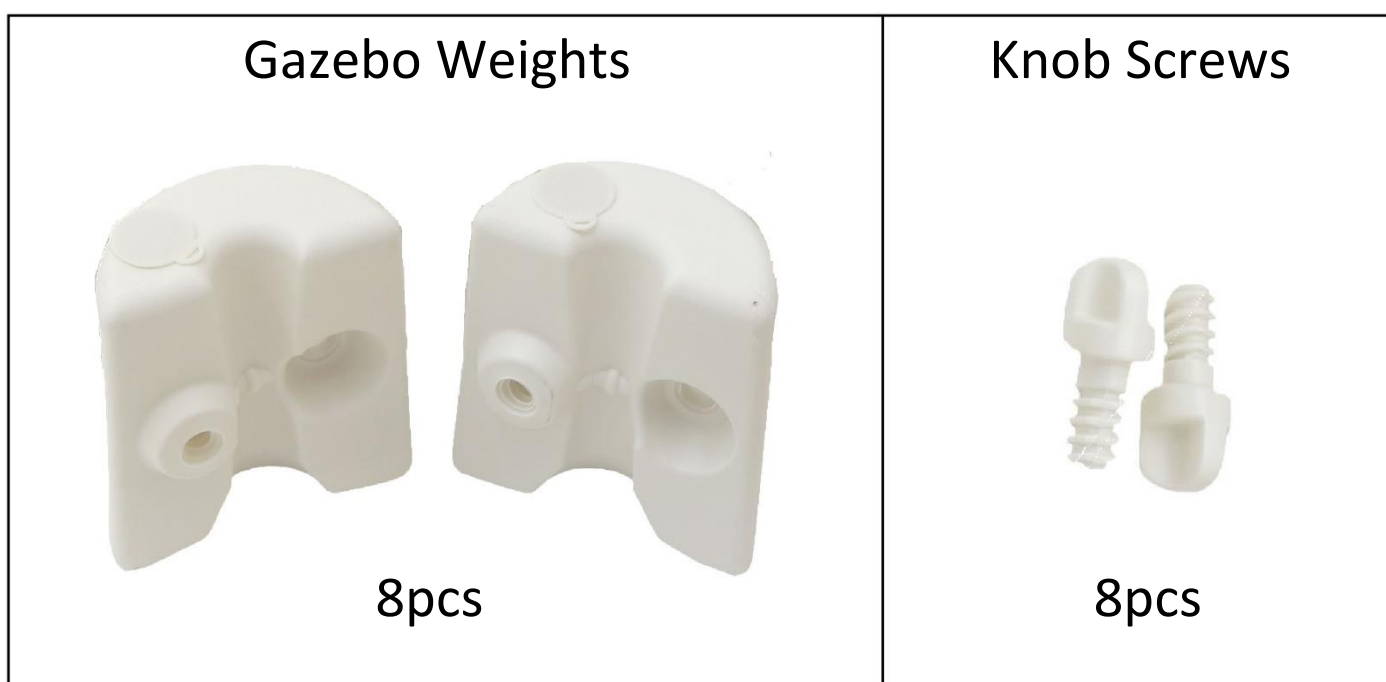

1. Place the gazebo weights around the gazebo leg, ensuring that they are placed directly against the leg.
2. Remove the plastic plugs found on top of the gazebo weights, putting these to the side.
3. Fill the gazebo weights with either water or sand.
4. Place the plastic plugs back on top of the gazebo weights, ensuring that they are secure.
5. Push knob screw through the sides of the gazebo weights, ensuring that you do not overtighten.
6. Once finished using the gazebo weights, empty them and then store.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

An Official OYPLA Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4077