



3 in 1 Play Pen



Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- This product is not protective against fire but is instead to prevent young children from approaching the fireplace.
- If the product is damaged or has any defects, please contact cservice@oypla.com
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- This product is intended for indoor use only.
- This product is not a toy, and is only to be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Children should be supervised at all times when using the product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Leaving the product outside exposed to weather, especially direct sun and rain, will speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- Keep fingers, loose clothing, and hair away when folding the product.
- Only use this product on stable, level and dry ground.
- This product is suitable for children up to the age of 2.
- Ensure the play pen is secured with the wall fittings if using to guard a fireplace.

Operating Instructions

① 1 pcs Gate Section	② 5pcs Panels	③ 4pcs Securing Hinge	④ 4pcs Lock Fitting	⑤ 4pcs Wall Brackets
⑥ 8pcs Pointed Woodscrews	⑦ 8pcs Flat Bottom Screws for Securing Hinge	⑧ 8pcs Bolts for Securing Hinge	⑨ 8pcs White Expansions Screws	

Assembly:

1. Ensure that the handles of the gate section are in the upright position.
2. Remove the pole from the end of one of the panels by slightly lifting it and sliding the bottom section out of the lower hinge as shown below. You will then be able to slide the top part out of the upper hinge.



3. To connect the gate section to a panel you must lift the gate section slightly and connect it to the panel by pushing the connector hinges of the gate onto the hinge of the panel as shown below.




4. To allow the gate to be adjustable, you must remove the centre pole from the gate section by again slightly lifting it and sliding the bottom section out of the lower hinge followed by sliding the top part out of the upper hinge.

5. Once you have adjusted the gate into the correct position you can now secure this by reinserting the pole into the frame. To do this you must firstly put the upper part of the pole back into the upper hinge which will then allow you to slide the lower part into the lower hinge as shown below.



6. In order to make the product foldable, you must ensure that the plastic connectors are facing in opposite directions as shown below.

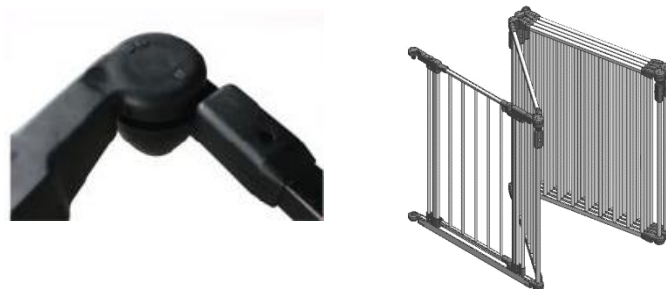

7. Repeat the above steps in order to add or remove panels from the gate.

Mounting to a Wall:

1. Insert the outer pole of the gate/panel into the lock seam of the securing hinge (3). To secure the pole you will need to close the wings of the hinge.
2. Place the lock fitting (4) between the two wings, making sure that the holes are in the lock fitting as shown below. The holes on the wings must be positioned on top of each, not overlapping.
3. Insert a screw (7) through every hole and add a bolt (8) on the end and tighten. Make sure that the nuts are on the outside so that they cannot be tampered with.

4. There will be three buttons on the back of the lock fitting which will need to be inserted into the wall. The wall bracket (5) will need to be lifted so that the buttons on the lock fitting can snap into the wall bracket as shown below.



5. Lift up the loose gate section and remove the wall bracket by sliding it down and pulling it. You can now mark the wall bracket's position on the wall.
6. You are now able to attach the wall bracket to the wall by using the woodscrews (6).
7. You will then be able to attach the gate to the wall using the lock fitting. Make sure you tighten the screws.

Use of the Gate:

- To open, push both buttons of the handle and lift slightly in order to unlock the hook on the lower part of the gate. The handle must be in an upright position. The gate is now able to be opened in both directions.
- To close, push both buttons on the handle and slightly push the gate into the frame. The hooks will lock the lower part of the gate so that it is now closed. Always check properly to ensure that the door is locked.

Please retain a copy of all instructions for future



An Official Oypla Branded Product



Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX