



HOMF

User Manual

Model Code: 4115

THANK YOU FOR YOUR ORDER

Contents

1 Front Cover

-

2 Safety Instructions

-

3 Unfolding Instructions

3 Back Cover

End



Folding Desk

OYPLa

Manual Version: v1.0

Model Code: 4115

Oypla.com LLP / www.oypla.com

Contents

1 Front Cover

-

2 Safety Instructions

-

3 Unfolding Instructions

-

3 Back Cover

End

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Keep children and animals away from the work area, as the small parts in the package could cause choking.
- Do not use this item if any components are missing or damaged.
- During assembly, children and pets should be kept away from the product, due to possible risk of injury.
- Keep away from fire.
- Pinch points can cause personal injury.
- Keep fingers, loose clothing and hair away when assembling the product.
- Never carry out any alterations or modifications to this product.

- Only clean using a damp cloth. Do not use strong, industrial cleaning substances as these may damage the product.
- Do not discard of any of the packaging until you have checked that you have all the parts and fixings present.
- This product is intended for indoor use only.
- This product is for domestic use only.
- This product is not a toy, and is only to be used for its designated purpose.
- If the product is damaged or has any defects, please contact cservice@oypla.com



Never overload the desk. The maximum weight capacity is 30kg.



When placing drinks on the desk, hot or cold, always be sure to use a suitable coaster or cover, to prevent them from damaging the surface of the desk.



Children are not allowed to operate this product without sufficient supervision guidance provided by an adult.



Never crawl under the desk.



Ensure that no obstacles are in the desk's space.



Do not stand or sit on the desk top.

Contents

1 Front Cover

_

2 Safety Instructions

-

3 Unfolding Instructions


-

3 Back Cover

End

Unfolding Instructions

Note: Keep a watchful eye for pinch points. Keep fingers, loose hair and clothing away from any potential pinch points when unfolding the product.

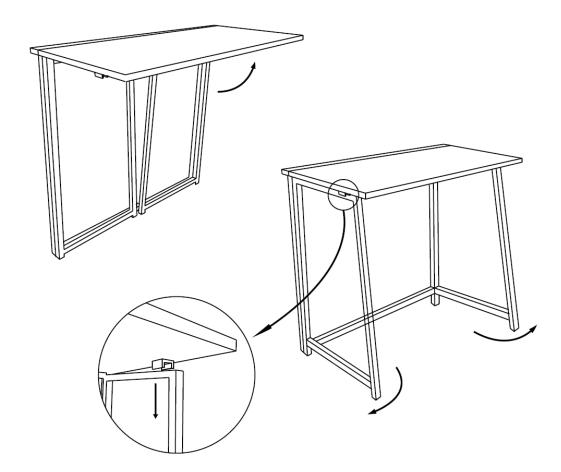

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help.

Telephone: 020 3600 22 55Email: cservice@oypla.comLive Chat: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



An Official OYPLA Branded Product

Manual Version: v1.0 Model Code: 4115

Oypla.com LLP / www.oypla.com