



## Ladybird Rocker



## **Safety Instructions**

Notice: This manual contains important information regarding the operation, safety and maintenance of the product. Read and understand the manual before using the product, and save this manual for future reference.

- Remove any packaging before giving toy to child.
- Children should be supervised at all times when using the product.
- Leaving the product outside exposed to weather, especially direct sun and rain, will affect
  the quality of the product. This can be prevented by removing the product from these
  conditions.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Product is only to be used for its designated purpose.
- Keep away from fire.
- Only use 3 x Button Batteries, as instructed
- Only use this product on stable, level and dry ground.
- If the product is damaged or has any defects, please contact cservice@oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION







## **Environmental Protection**

An Official OYPLA Branded Product

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

