



# Folding Camping Stove




# Safety Instructions

**Notice: Ensure you read and fully understand instructions before use**

**While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.**

- This product is for outdoor use only. Do not operate indoors (house, tent, garage, etc.) or in any unventilated or enclosed area,
- All burning appliances consume oxygen. This stove uses oxygen from the air and may produce carbon monoxide, which is a colourless, odourless gas that can kill you. Ample ventilation must be provided to avoid endangering your life. Be certain that the area which this appliance is used is properly ventilated at all times.
- Do not use this produce as a space heater.
- Do not leave the stove unattended when hot or in use. Only adults are to operate this stove; keep children and pets safely away. Carefully monitor all activity around the stove to avoid burns or other injuries.
- Accessible parts may be very hot. Keep young children away.
- Turn off the gas supply at the gas cylinder after each use.
- Do not operate the stove within 90cm of any combustible material including walls and ceilings.
- Do not use this stove on/in apartment complex balconies or patios, recreational vehicles, campers or boats.
- Do not store or use gasoline or other liquids/aerosols with flammable vapours in the vicinity of this appliance.
- Always attach or detach the propane/butane cylinder outdoors away from flame, pilot lights or other sources of ignition and only when the appliance is cool to touch.
- Do not allow the gas hose to come into contact with any hot surfaces. Inspect the hose for damage such as burns, chafing and kinks before each use.
- Read and follow all warnings and instructions on or accompanying propane/butane gas.
- Always inspect the appliance, propane/butane gas cylinder, and its connections for damage, dirt or debris before attaching the propane/butane cylinder. Do not use if either has been damaged or modified.
- When transporting, not using, or storing the stove always disconnect the propane/butane cylinder.
- The propane/butane cylinder should remain upright to prevent liquid propane/butane flare-up.
- In case of fire, turn the gas off at the burner control knobs and use a type BC fire extinguisher or other appropriate means to extinguish the flame.
- Keep hands, face and hair away from the burners. Use long matches or a long-nosed lighter to light the burners. Do not wear loose clothing or allow long hair to hang freely while lighting or using the stove.
- Always snap down the lid arms on the bottom case to prevent the stove from becoming unstable while in use. Use only on a flat surface.
- Do not move the stove whilst in use. Avoid touching hot surfaces.
- Any modification of the appliance may be dangerous.
- Use protective gloves when handling hot components.
- Gas parts are sealed by the manufacturer and must not be altered by the user.
- The maximum diameter for pots/pans for use on the left and right burner is 220mm, the minimum is 100mm.
- This product is not intended for use by persons (including children) with reduced physical, mental and sensory capacities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by persons responsible for their safety.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

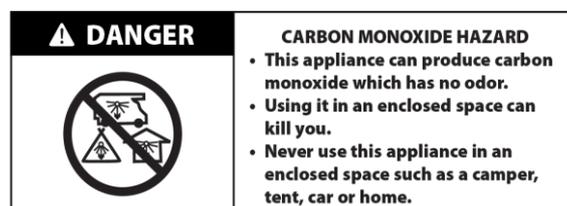


# Operating Instructions

If you are missing any of the below parts please contact [cservice@oypla.com](mailto:cservice@oypla.com)

Please be aware that you will be referring to this parts list throughout the assembly process.

## Product Details:

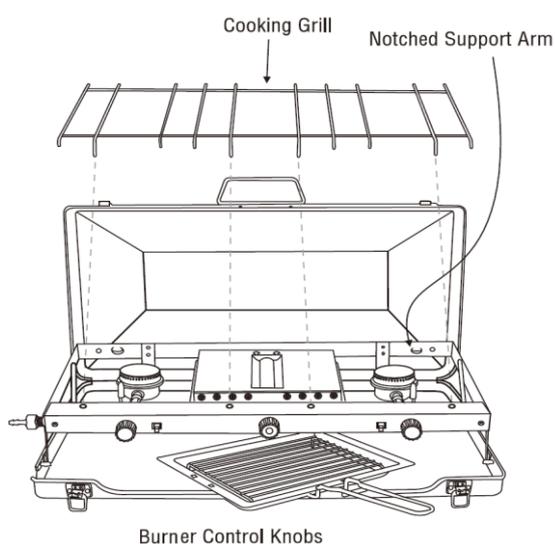

## Assembly Instructions:

1. Snap down the lid arms on the bottom case.
2. Open the lid and align the two wind guards by inserting them into the notched support arms.
3. Make sure the burner control knobs are in the "OFF" position.
4. Attach the regulator assembly (NOT INCLUDED) to the stove fittings. Hand tighten only and make sure not to cross-thread the connections.
5. Attach the propane/butane cylinder to the regulator assembly by turning the propane/butane cylinder anticlockwise. Hand tighten only and make sure not to cross thread the connections.


**CAUTION:** Turn the cylinder so that it is fully upright. The cylinder must always sit flat on the surface.

## Gas Connection:


- Type of gas: PROPANE at 37mbar / BUTANE at 28~30mbar
- Gas category: I<sub>3</sub>+(28~30/37)
- Gas cylinder: Operates off 2.7-15kg propane/butane cylinders. Maximum cylinder diameter: 32cm. It may be dangerous to attempt to fit other types of gas containers.
- Gas hose: In accordance with national legislation and standards (max. 1.5m).
- Gas regulator: In accordance with national legislation and standards (max. flow rate 1.5kg/h). The regulator must comply with EN16129.
- Orifice diameter: 0.6mm
- The propane/butane cylinder should be positioned at a minimum of 5-10cm from the stove. Always use a cylinder with a flat bottom.

## Gas Leak Testing:

Gas leak testing must be performed outdoors in a well-ventilated area every time the gas cylinder is connected to the stove. Always keep the unit away from open flames, sparks or lit cigarettes. Never use a flame to check for gas leaks.

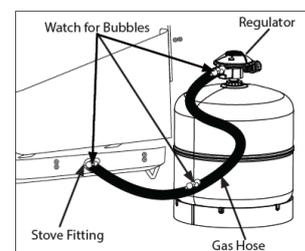

1. Prepare a soapy water solution (one part washing up liquid to three parts water) to test for gas leaks in the connections. Apply a generous amount of the soapy mixture to the regulator assembly at the regulator, along the entire length of the hose, and at the stove fitting location.
2. With the burner control knobs in the "OFF" position, check for bubbles where the gas cylinder attaches to the regulator assembly, along the entire length of the hose, and at the stove fitting. If the soapy mixture starts bubbling, gas is leaking through the connectors. Disconnect the gas cylinder. Retighten the connection that is leaking gas and repeat the procedure with the soapy mixture until gas no longer leaks.
3. Once all the leaks have been sealed, wait for at least 5 minutes for the gas fumes to dissipate before lighting the burners.

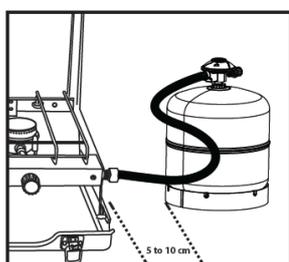


## Operation:

### Warning:


Do not allow gasoline or any other flammable vapours or liquids to come into contact with the stove while lighting or at any time during use.

- Do not allow the gas hose to come into contact with any hot surfaces. Inspect the hose for damage such as burns, chafing and kinks before each use.

The stove should be set up with minimum clearance of 90cm from combustibles to the top and side of the burners.

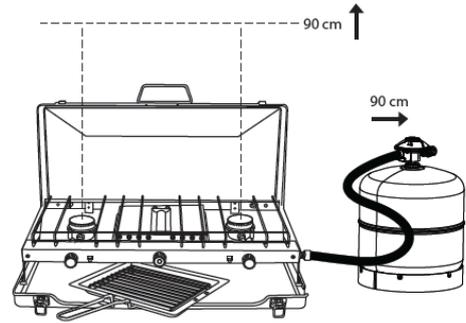

There are 3 positions for the control knobs as indicated on the stove:


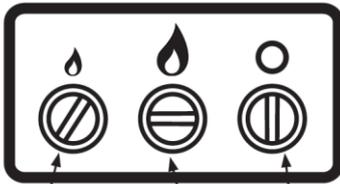


Reduced flow rate (smaller flames) Full flow rate (bigger flames) OFF

1. Decide which burner to light first. Using a long match, hold the flame beside the burner. Turn the burner control knob to the full flow rate position until the burner lights.

**Warning:** If the burner does not light within 5 seconds, turn the burner control knobs off immediately. Wait at least 5 minutes until the gas fumes have dissipated before attempting to light the burner again.

2. To light the second burner and middle grill burner follow the previous instructions.
3. To light the hotplate burners, turn the control knob to the full flow rate position and then press down the piezo ignition device several times until the burner lights.
4. Adjust the burner flame as necessary by using the burner control knob. Turn the stove off using the burner control knobs when the stove is not in use.
5. Observe the flame height and colour when lit. The flame should have a blue centre and yellow tip.

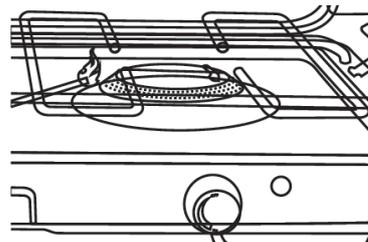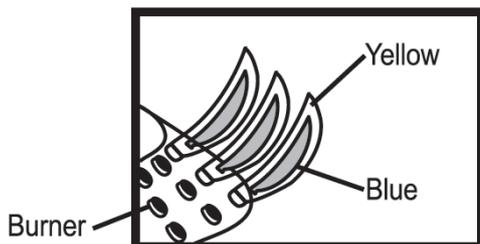

## Specification:

TYPE OF GAS	Propane at 37 mbar Butane at (28~30) mbar		
GAS CATEGORY	I <sub>3+(28-30/37)</sub>		
POWER	LEFT	MIDDLE	RIGHT
	1.5 kW	1.5 kW	1.5 kW
TOTAL POWER	4.5 kW (G30 = 327 g/h / G31 = 322 g/h)		

## After Use:

- Always allow the stove to cool completely before handling.
- Always disconnect the gas cylinder from the stove when not in use – a safety cap should be placed on the gas cylinder.
- Detach the regulator assembly and store under the grill inside the stove.
- Never store the gas cylinder in an enclosed area (house, garage, etc.) Store outdoors in a well ventilated, shaded area away from any heat source or open flame.
- Fold the wind guards and lid back into their closed position. Unfold the lid arms to lock the lid down.

## Care and Maintenance:

- Wash the cooking grill with hot, soapy water. Rinse well and dry before storing. Wipe remaining exposed parts of the grill with a damp cloth. Do not use abrasive materials.
- To protect the stove, the unit must be kept clean and covered at all times when not in use.
- Cover and store the stove in a protected area away from children or pets.
- After the product has been stored and prior to reusing, check that the burners are free from leaves, insects, spider webs, dirt, etc. as these items can obstruct the flow of combustion air.
- Prior to each use, visually check the burner flame for proper operation. Do not use if the burner is not operating properly.
- This stove requires unobstructed airflow to operate correctly.
- During use or storage, always keep the stove area clear and free of combustible materials, gasoline and other flammable vapours and liquids.
- Due to the intense heat from the burner, it is normal for discoloration to occur on the stove during the first few uses.
- Do not allow a build-up of grease or fat to occur, this could inadvertently ignite and cause a fire.

**Please retain a copy of all instructions for future consultation.**



**An Official Oypla Branded Product**

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

