



Large Multi Cooker

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Never operate electrical appliance in immediate vicinity of water sources.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- Only use this product on stable, level and dry surfaces.
- This product is for domestic use only.
- To avoid injury, avoid touching the pan until it has been left to fully cool down.
- Not suitable for use by children.
- Clean the lid with a soft sponge and a small amount of detergent.
- To clean the heating plate, use a wet cloth/sponge to wipe. If it is still difficult to clean, put a small amount of water on the heating plate and turn the cooker on and wipe with a cloth. Be careful when doing this.
- Do not use any detergent or metal brushes to clean the heating plate in order to avoid damage.
- Use a soft cloth/towel to dry the product.
- To avoid scratches on the pan, do not use metal appliances to stir/move food in the pan and do not cut food on the pan.
- Do not put flammable products on the pan.
- This product is intended for indoor use only. Using this product outside could lead to product failure.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

- Ensure that all packaging is removed and that the product is clean before use.
- Firstly, ensure that the thermostat is set to off and insert the thermostat into the socket that is located on the main heating plate.
- Then insert the plug into a suitable plug socket, referring to the rating label and turn on at the wall.
- Next turn the thermostat to the appropriate temperature for the food that you are cooking. Please see below for some recommended temperatures for certain foods:

Scale on Thermostat	Food Type
100	Baked Food, Burgers
150-200	Pan Fried Food, Eggs (Scrambled), Ham, Smoked Meat
240	Pizza

- The indicator light will light up when the pan is ready to use. This will usually be after it has been left to heat up for around 5-10 minutes.
- The use of the glass lid is recommended for cooking foods such as pizza, meats, burgers, etc.
- Once the food is cooked, you can either keep the pan on to keep the food warm but if not it is suggested that you should turn it off and turn it off at the plug and take the plug out of the socket.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



Environmental Protection

OYPLA.COM

An Official OYPLA Branded Product



Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4190