



PTC Wall Heater

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- The product should only be connected to a 220-240V AC, 50Hz electrical outlet.
- Never leave the product unattended whilst it is switched on.
- If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach and do not allow children to use it.
- The product is only intended for normal domestic use and only in the manner described in this instruction manual.
- Inspect the mains lead regularly. Never use the product if the mains lead or plug has been damaged in any way.
- Do not place the mains lead on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Never move the product by pulling on the lead.
- Before use check that the heater is mounted correctly and securely according to the mounting instructions.
- Only mount the unit indoors in a clean and dry environment.
- Do not use this heater in bathroom.
- Never place the cable directly against the heater or close to a hot air outlet.
- Never cover the heater in any way.
- Do not place the heater close to flammable materials. The heater must be mounted so that the flow of hot air is not blocked or hindered.
- Never use the heater in areas where explosive gasses or liquids are stored.
- The heater must be installed at least 2m above the floor.
- Do not discard of any packaging until you have checked that you have all of the parts and fittings required.
- If the product is damaged or has any defects, please contact cservice@oypla.com

⚡ WARNING ⚡	To Reduce The Risk of Fire or Electric Shock, follow these basic precautions:
<ul style="list-style-type: none">• Read all instructions before using the heater.• Never allow children to operate or play with the heater.• Never clean heater parts with flammable fluids. The fumes can create a fire hazard or explosion.• Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other heater. The fumes can create a fire hazard or explosion. <p>UNPLUG OR DISCONNECT THIS HEATER FROM THE POWER SUPPLY BEFORE SERVICING.</p> <p style="text-align: center;">-Save these instructions-</p>	

Operating Instructions


If you are missing any of the below parts please contact

cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

Installation

Drill two holes on the wall at least 2m above the floor and 20mm from any corners. Drill the two holes 385mm apart and ensure the hole is the same diameter as the rawl plug. Insert the screws and leave 10mm protruding from the wall to hang the heater on.

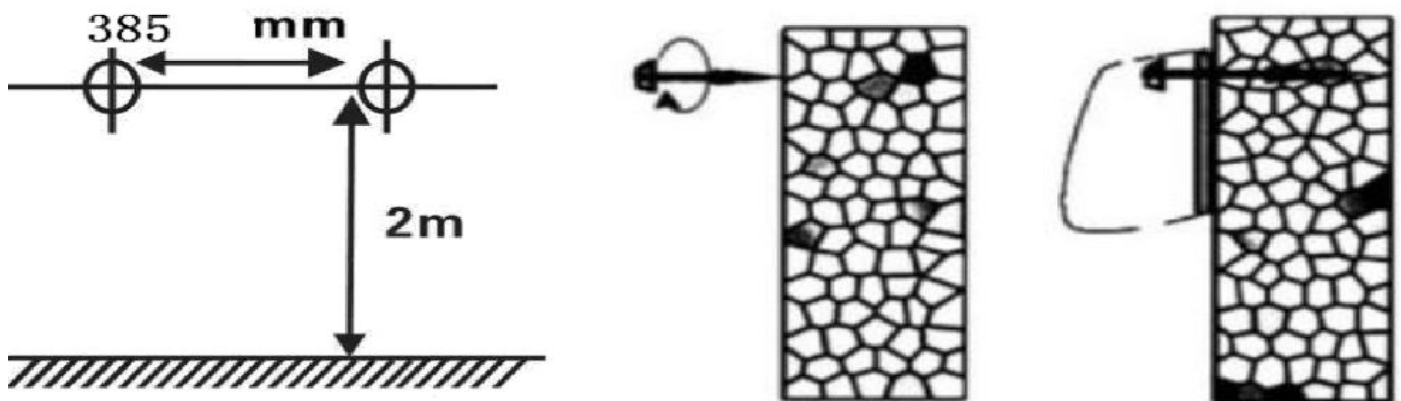

Operating Instructions

1. Plug the heater into a 220-240V AC outlet. The heater will be on standby mode.
2. Turn the heater on by pressing the “ON/OFF” button on the remote control or control panel. The heater will enter fan mode and will blow unheated air.
3. Turn the heater on by pressing the “MODE” button on the remote control or control panel. This will set the heater at low heat mode.
4. Press the “MODE” button again to set the heater at high heat mode.
5. To turn off the heater, press the “ON/OFF” button again. The fan will keep working for 30 seconds to remove excess heat from the heater.

Timer Function

The timer function allows the heater to turn off automatically after the specified amount of time. Press the “TIMER” button on the remote on control panel to set the timer at 30 minute intervals up to 8 hours. The selected timer setting will be shown on the LED display.

Overheat Protection

The heater has been provided with an overheating safety sensor that turns the heater off if there is a technical malfunction or if it is being used incorrectly (such as obstruction of the air vents). If it happens, you must unplug the heater and remove the cause of overheating or correct the malfunction.

After a cooling down period of approximately 30 minutes turn the heater back on.

Care and Maintenance

- Before cleaning the heater, disconnect the plug from the power supply and allow it to cool down fully.
- Clean the casing with a damp cloth. Do not use any strong cleaning material and do not allow water to reach any internal parts.
- If the heater is not going to be used for a long time it is recommended to store the heater in its box in a dry place to prevent the build-up of internal dust.

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



OYPLA.COM

An Official OYPLA Branded Product

**UK
CA**

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4219