

# GARDEN

User Manual

Model Code: 4220

WWW.OYPLA.COM

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
5	Operating Instructions
-	-
5	Technical Information
-	-
6	Troubleshooting
-	-
7	Back Cover

End

OYPLA



## Water Butt Pump

Model Code: 4220

Oypla.com LLP / www.oypla.com

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
5	Operating Instructions
-	-
5	Technical Information
-	-
6	Troubleshooting
-	-
7	Back Cover

End


# Safety Instructions


## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Children should be supervised to ensure that they do not play with the product. Always keep children and unauthorised persons out of reach of the appliance.
- Before use, make sure the connecting socket is not near water.
- Do not grab the feeder cable, plunge the pump, lift or carry while it is connected to the grid.
- When the appliance is not in use, always unplug from the mains socket.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Unpacking, installing and fixing the parts are to be completed by an adult.
- Do not leave the product unattended while in operation.
- The temperature of the grained liquid must not exceed +35°C.
- Visually check the product before use, in particular the feeder cable and plug.
- To ensure long life of the pump seal, rinse the pump with clean water regularly.
- To store over winter, make sure there is no water in the appliance.
- This product is intended for outdoor use only.
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Pinch points can cause personal injury.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Not suitable for long-run operation.
- Do not use the pump for drinking water.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

## Warnings

 Ensure to only use splash-proof extension reels that are approved for outdoor use, if an extension reel must be used.

 
 Ensure to never use this pump for drinking water.

Contents

# Assembly Instructions

## Parts List:

- If you are missing any of the below parts, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- Please be aware that you will be referring to this parts list throughout the assembly process.

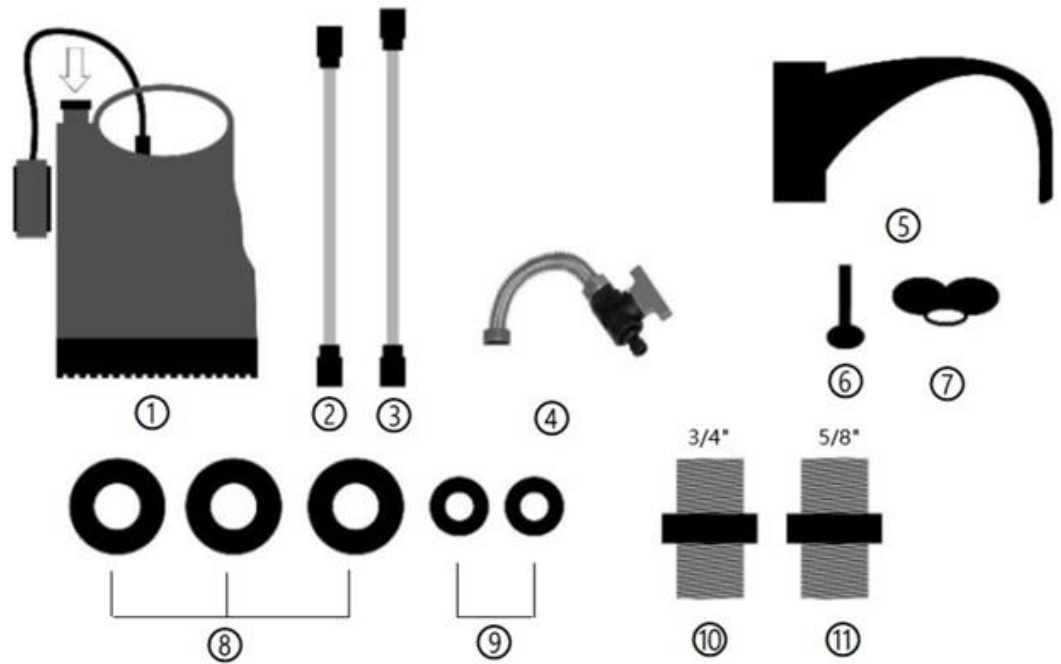

No.	Description	Quantity
1	Base (with float switch and handle)	1pc
2	Middle pole section	1pc
3	Bottom pole section	1pc
4	Hose connector	1pc
5	Handle	1pc
6	Screw (to secure handle)	1pc
7	Accessory (to secure handle)	1pc
8	Flat washer (3/4")	3pcs
9	Flat washer (5/8")	2pcs
10	3/4" Connector	1pc
11	5/8" Connector	1pc




- 1 Front Cover
- 
- 2 Safety Instructions
- 
- 2 Warnings
- 
- 3 Assembly Instructions
- 
- 5 Operating Instructions
- 
- 5 Technical Information
- 
- 6 Troubleshooting
- 
- 7 Back Cover

End

# Contents

   - 1 Front Cover
- 
- 2 Safety Instructions
- 
- 2 Warnings
- 
- 3 Assembly Instructions
- 
- 5 Operating Instructions
- 
- 5 Technical Information
- 
- 6 Troubleshooting
- 
- 7 Back Cover

End

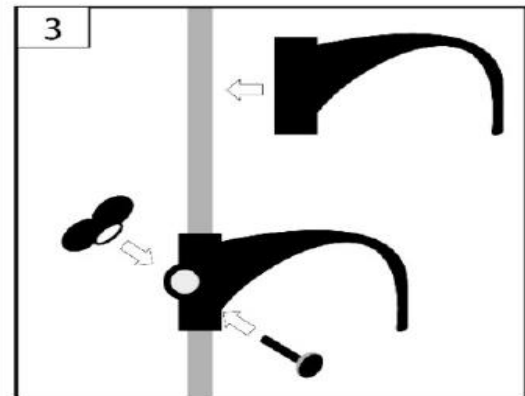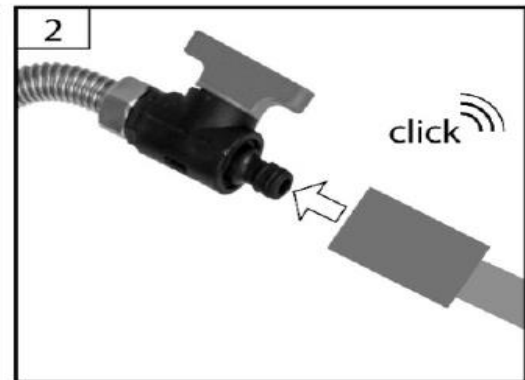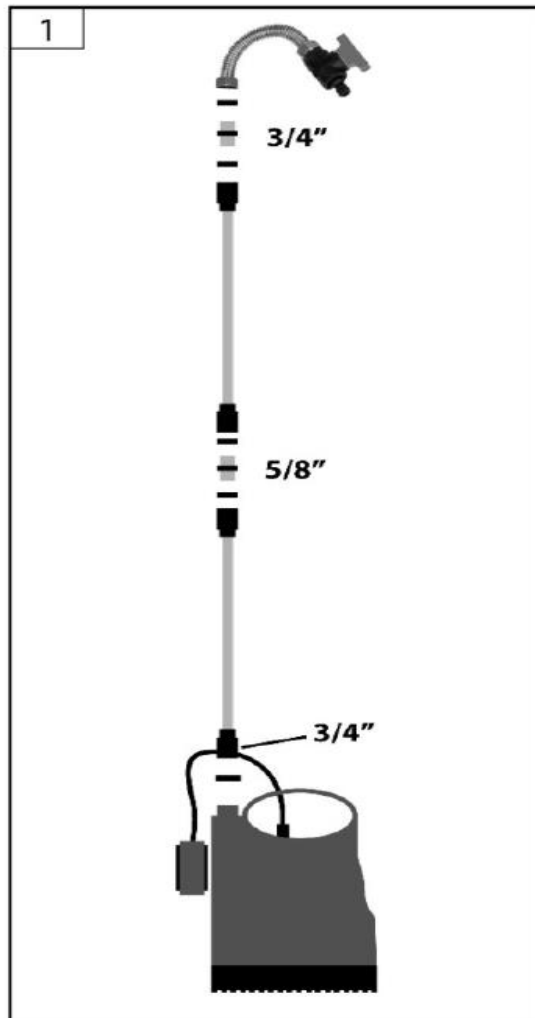




# Operating Instructions

Please refer to the diagrams on the following page for instructions on how to operate your product.

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
5	Operating Instructions
-	-
5	Technical Information
-	-
6	Troubleshooting
-	-
7	Back Cover

   End

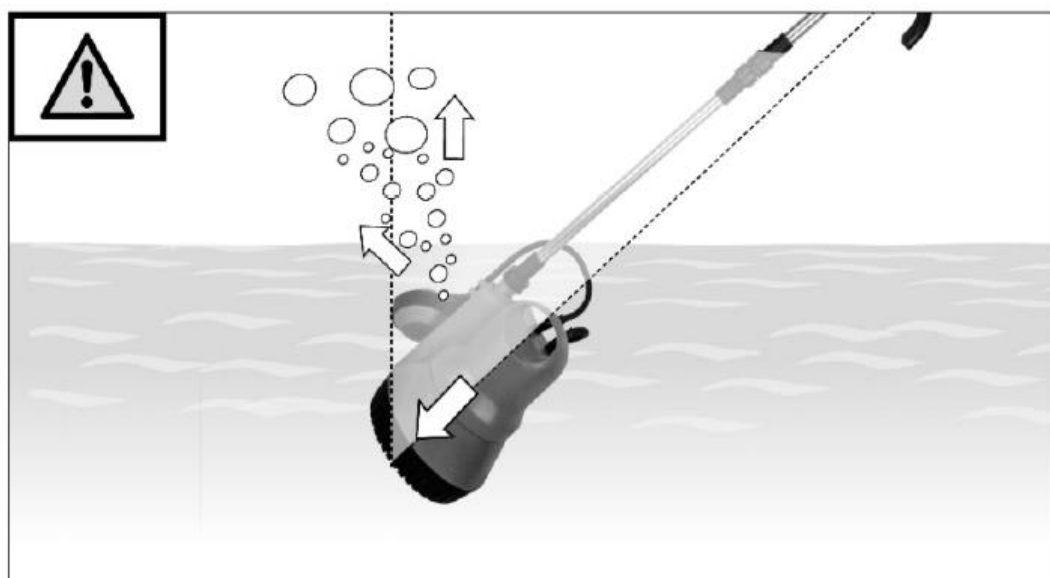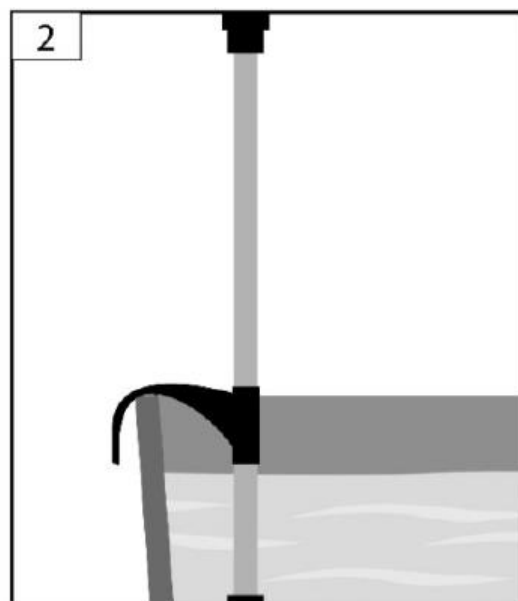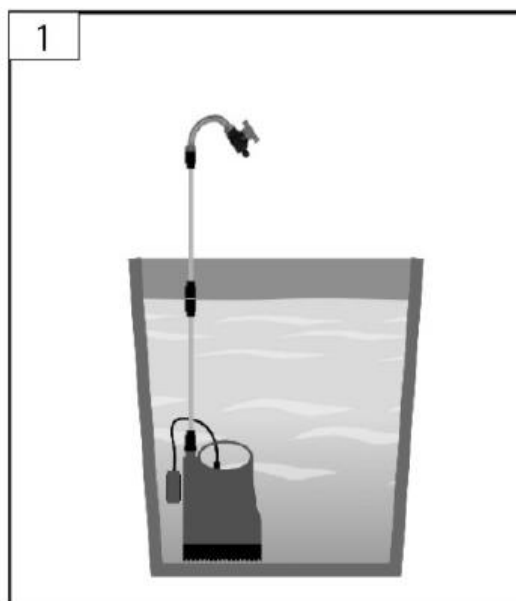

## Technical Information

Supply Voltage	220-240V / 50Hz
Rated Power	350W
Max. immersion depth	7m
Max. delivery head	12m
Max. flow rate	2400l/h
Max. grain size	3mm
Max. water temperature	35°C
Thread hose connection	3/4" AG
Protection class	IPX8
Weight	4.1kg

## Contents

# Troubleshooting

1 Front Cover

-

2 Safety

Instructions

-

2 Warnings

-

3 Assembly

Instructions

-

5 Operating

Instructions

-

5 Technical

Information

-

6 Troubleshooting

-

7 Back Cover

End

Failures	Causes	Removal
Engine does not start	No system voltage Blocked pump wheel Floating switch in shutdown position	Check the voltage Visually inspect the pump wheel for foreign objects Check the water level
Pump does not suck	Pump without water Water level too low Blocked pump wheel	Let the air bubbles release Switch the pump off, water level must go up Remove the obstruction
Thermal detector switching the pump off	Dirty tube filter Water temperature too high Pump running continuously at maximum pressure	Clean the tube filter and let the pump cool down Reduce the water temperature Make more breaks
Insufficient amount of water pumped	Dirty tube filter Water level quickly going down Maximum head of delivery exceeded Transport guide broken	Clean the tube filter Ensure sufficient inflow Check the transport path length Check the transport guide

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
5	Operating Instructions
-	-
5	Technical Information
-	-
6	Troubleshooting
-	-
7	Back Cover

End



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

**Telephone:** 020 3600 22 55  
**Email:** [cservice@oypla.com](mailto:cservice@oypla.com)  
**Live Chat:** [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

## ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

