

Contents

- 1 Front Cover
- 2 Safety Instructions
- 3 Operating Instructions
- 4 Cleaning Instructions
- 5 Back Cover



Electric BBQ

Contents

1	Front Cover
2	<u>Safety Instructions</u>
3	Operating Instructions
4	Cleaning Instructions
5	Back Cover

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Do not carry out alterations or modifications to this product.
- Do not place the appliance on or near a hot gas flame, electrical element or any other appliance.
- Do not use this appliance for anything other than its intended use.
- Persons (including children) with reduced physical, sensory and mental capacities or lack of experience and knowledge do not intend this product for use, unless persons responsible for their safety have given them supervision or instruction concerning use of the product.
- The heating element and cooking rack will become very hot during use. Do not touch these parts whilst the product is in use.
- This product is not a toy, and is only to be used for its designated purpose.
- To protect against electrical shock, do not immerse any part of this appliance in water or any other liquid.
- Never operate electrical appliances in the immediate vicinity of water sources.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug it from the mains socket.
- Only use this product on stable, level and dry surfaces.
- This appliance is for domestic use only.
- To avoid injury, avoid touching the grill until it has been left to fully cool down.
- To avoid scratches on the grill, do not use metal appliances to stir/move food and do not cut food on the grill.
- Do not put flammable products on the grill.
- Never cover the rack with aluminium foil or any kind of kitchenware.
- Do not store the grill outside to avoid damage from weathering.
- Only carry the appliance using the plastic handles.
- Always carry the grill and the stand separately.
- Charcoal or similar combustible fuels must not be used with this appliance.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Contents

1	Front Cover
2	Safety Instructions
3	<u>Operating Instructions</u>
4	Cleaning Instructions
5	Back Cover

Operating Instructions

- Fill the tray with approx. 2L of water, taking care to **not** exceed the maximum mark on the tray.
- Connect the appliance to the mains supply socket and turn the thermostat knob to the highest setting ("Max"). The pilot light will come on.
- Preheat for about 5 minutes before use. When grilling delicate food or for warm holding you can turn the thermostat back to a lower setting.
- The water in the tray will evaporate during use. It is therefore necessary to fill up water from time to time. Be careful to not pour water on the heating element.
- When grilling is finished, turn the thermostat to "0" and disconnect the grill from the mains supply socket.

Note: When powered on for the first time, the appliance may emit a new smell, and a small amount of smoke may be noticeable. This is perfectly normal, and due to the manufacturing oils used during production.

Note: Before first use, clean the appliance and its accessories using soapy water. Do not use abrasive cleaning chemicals or substances as these may damage the product.



Contents

1	Front Cover
2	Safety Instructions
3	Operating Instructions
4	<u>Cleaning Instructions</u>
5	Back Cover

Cleaning & Maintenance

- Before cleaning the appliance, always unplug it from the mains socket.
- Clean only using water and soap. Never clean the appliance using strong chemical or industrial substances, as these may damage the product.
- Always allow the product enough time to fully cool down before cleaning it after use.
- Always dry the product after cleaning with a clean and dry cloth or towel.

Contents

- 1 Front Cover
- 2 Safety Instructions
- 3 Operating Instructions
- 4 Cleaning Instructions
- 5 Back Cover

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



OYPLA.COM

An Official OYPLA Branded Product



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Manual Version: **V1.0**

Model Code: **4276**

Oypla.com LLP / www.oypla.com