



Laundry Chest

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

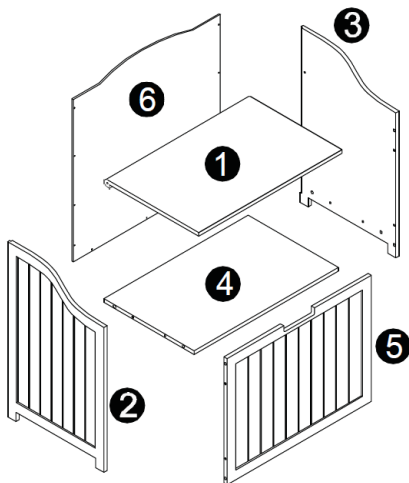
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only. Leaving the product outside exposed to weather, especially direct sun and rain, will speed the weathering process. This can be slowed by removing the product from these conditions.
- Do not carry out alterations or modifications to this product.
- Clean only with a damp cloth. Do not use abrasive cleaners or detergents.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Keep fingers, loose clothing, and hair away when closing the lid of the product. Pinch points can cause personal injury.
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- Use the correct fixings as indicated. Do not tighten any of the nuts until the unit is completely assembled, then finish by tightening all nuts. All nuts must be tightened before use.
- Keep away from fire.
- If the product is damaged or has any defects, please contact cservice@oypla.com

 





 
Operating Instructions

Parts List:

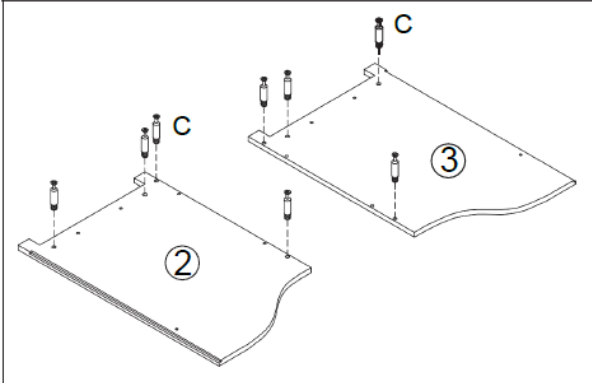
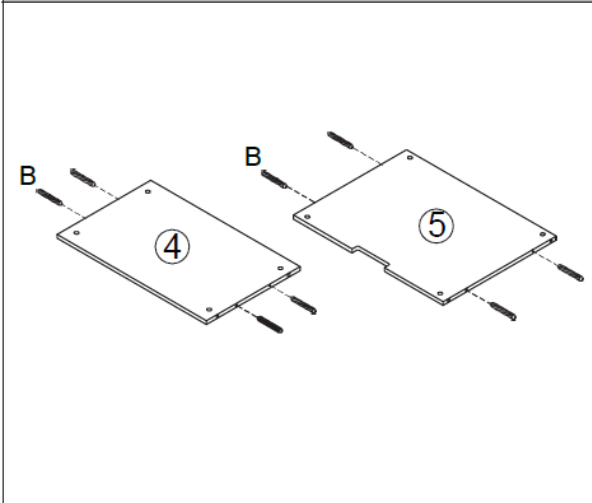
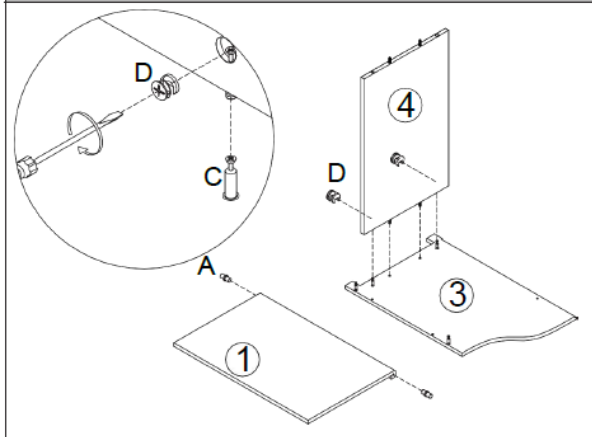
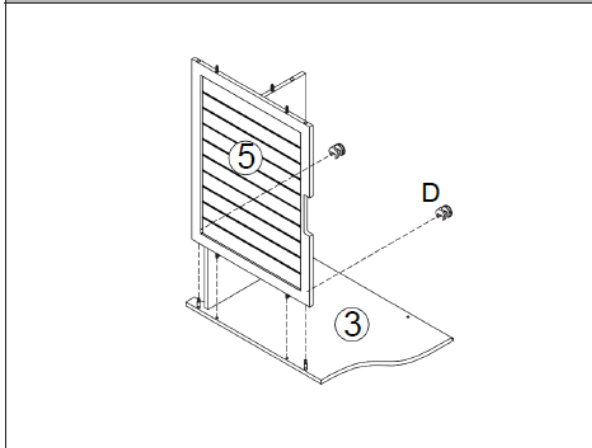
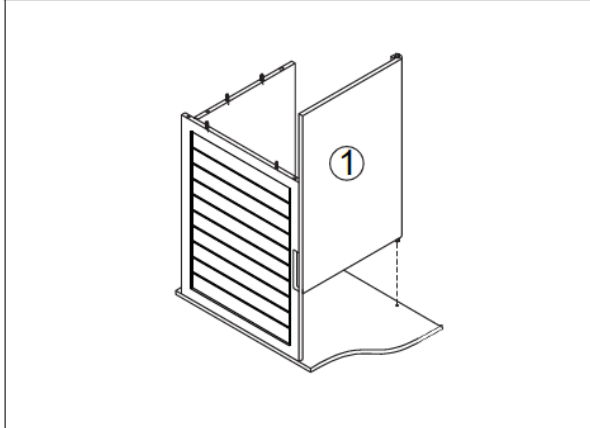
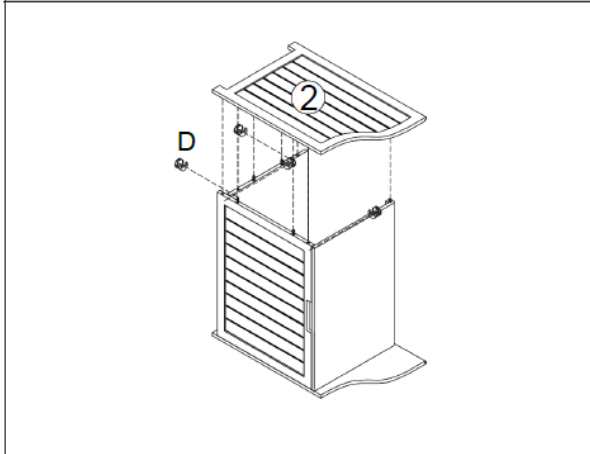
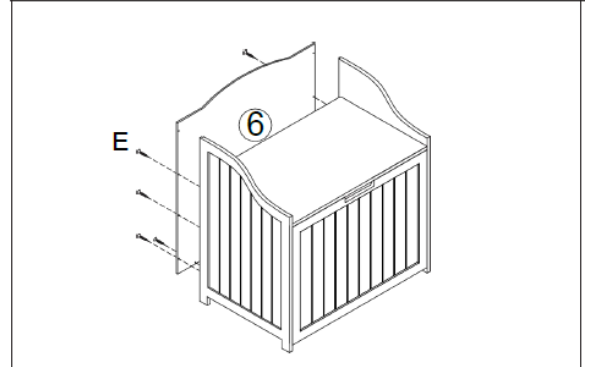
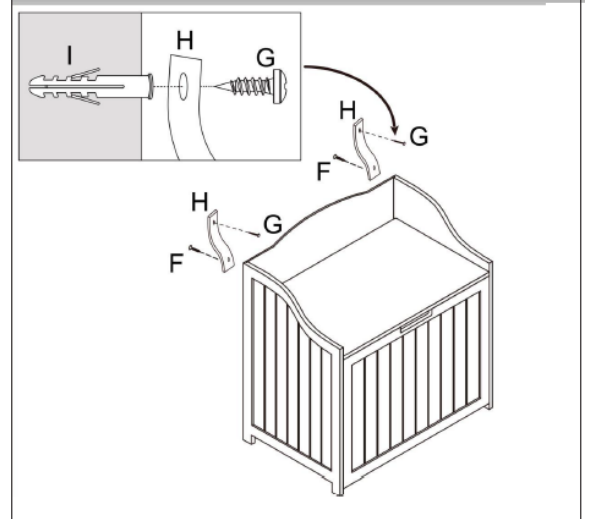
If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.



A Shelf support x4 	B Wood dowel x10  Ø6 x30mm	C CAM lock dowel x14 	D CAM lock x14 	E Screw x4  Ø4x10mm
F Screw x4  Ø4x10mm	G Screw x10  Ø4x10mm			

1. Insert four cam dowels (C) into each of the side panels (2 & 3).
2. Insert four dowels (B) into the sides of the front and bottom panels (4 & 5)
3. Attach the bottom panel to the right-hand side panel by first inserting cam locks (D) into the holes. Push the panel into place and secure by turning the cam locks with a screwdriver. Insert a hinge bolt (A) into either side of the lid (1).
4. Attach the front panel to the right-hand panel by securing with two cam locks.
5. Insert the lid into the hole at the back of the side panel.
6. Attach the left-hand side panel by securing with cam locks on the front and bottom panels.
7. Attach the back panel (6) using three screws (E) to secure it to each of the side panels, and four screws to secure it to the bottom panel.
8. Attach the wall fixing plate (H) to the back of the assembled chest using one short screw (F) on either side. Mount to the wall using the long screws (G) and rawl plugs (I).

STEP 1**STEP 2****STEP 3****STEP 4****STEP 5****STEP 6****STEP 7****WALL FIXING**

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4334