



Doll's High Chair

((

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.


- This toy is suitable for children aged 3 and above.
- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Unpacking, installing and fixing the parts are to be completed by an adult.
- This product is intended for indoor use only.
- Do not carry out any alterations and modifications to this product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Use only under the supervision of a responsible adult.
- This product is a toy to be used with dolls only. Do not use as a high chair.
- Keep away from fire.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Assembly Instructions


If you are missing any of the below parts, please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.


Assembly should be done by a responsible adult before giving to child.

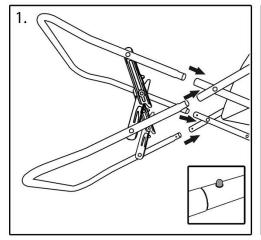


insert the supporting frame into the bottom frame in the direction as shown. ensure the fixing nipples have clicked into place

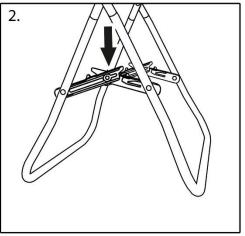

push down the safety mechanism on both sides to lock high chair into position.

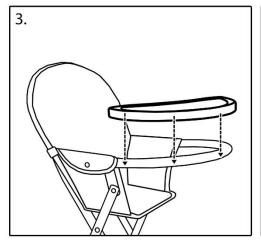

assemble the table.

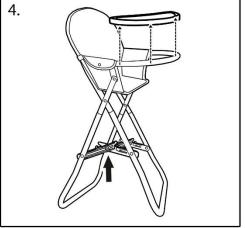

TO FOLD: take out the table firstly, and then push up the safety locks on both sides to unlock the frame.

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

