

OYPLATM HOME



9L Mini Oven

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Never carry out any alterations or modifications to this product.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- When the appliance is not in use, always unplug from the mains socket.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Never leave the mini oven unattended when in use.
- Never touch hot surfaces with your bare hands. Use oven gloves when removing hot items from the oven.
- Fires may be caused if the mini oven is covered by, or touching flammable materials such as; tea towels, paper towels, paper or curtains. Do not store flammable materials on or near the mini oven.
- Do not attempt to overflow the mini oven using oversized foods or baking ware as these may cause a fire.
- This product has a max output of 2900W.
- If the product is damaged or has any defects, please contact cservice@oypla.com


DO NOT ATTEMPT TO OVER FILL THE 9L LIMIT

Operating Instructions

Parts List:

If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.

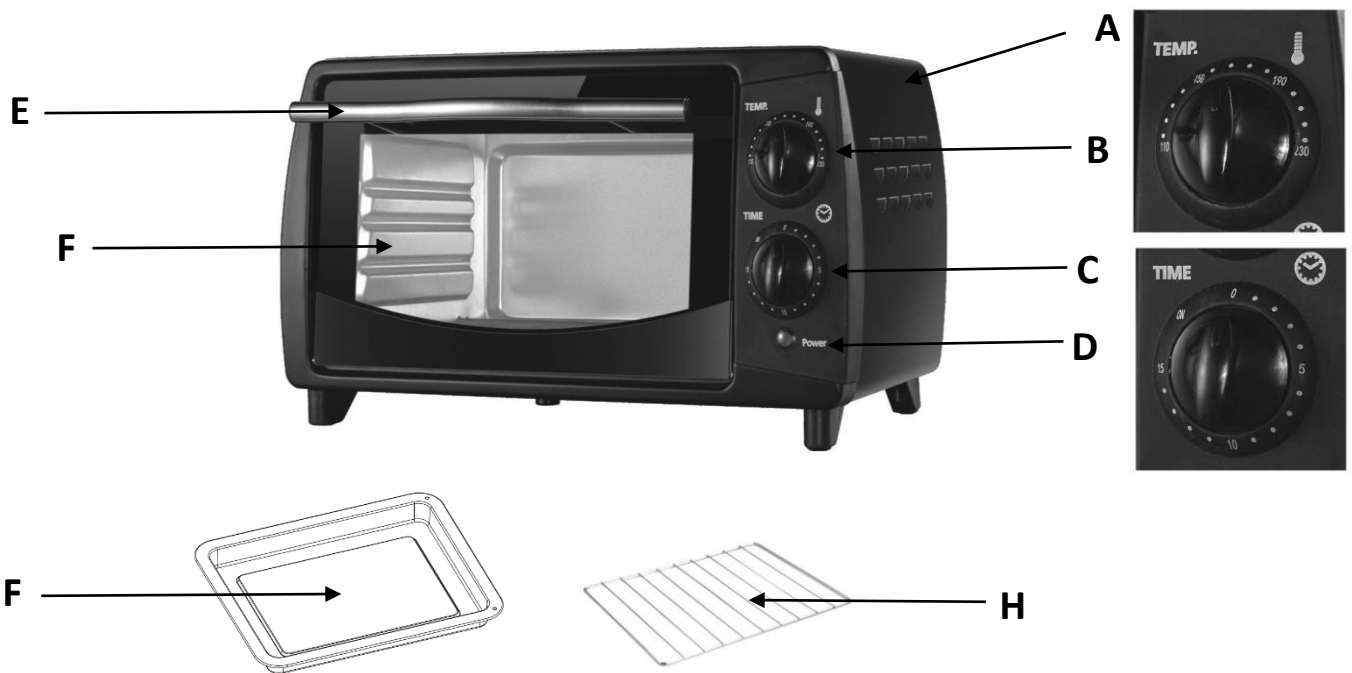

A – Housing

E – Door handle

B – Temperature control knob

F – Glass door

C – Time control knob

G – Baking tray

D – Power light

H – Wire rack

Before First Use

1. Make sure that the oven is unplugged and the TIMER switch is in the "OFF" position.
2. Remove all racks and pans and wash them in hot soapy water.
3. Thoroughly dry all accessories and re-assemble in the oven. Plug the oven into the socket and it is ready for use.
4. After cleaning it is recommended to run the oven at maximum temperature for approximately 15 minutes to eliminate any packing oil that may remain after cleaning.

Operation


To switch the oven on, turn the timer switch clockwise until it clicks. By turning further clockwise the timer will be set to the according position (maximum 60 minutes).

The oven will switch off automatically once the set time has been reached. When the oven switches itself off, a bell will chime.

To interrupt the operation, turn the knob anticlockwise back to the "V" position.

Cleaning

- Allow the oven to fully cool and unplug from the socket before cleaning.
- Remove the cooking tray for cleaning, do not use abrasive cleaners or scourers as this will damage the non-stick coating.
- Clean the outside of the oven with a damp sponge. Crumbs can be removed according to the below illustration.
- Do not touch the heating elements even when cleaning. Do not use abrasive cleaners, commercial oven cleaners or sharp utensils.

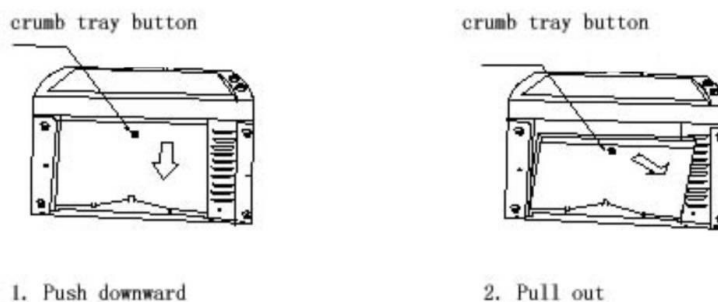

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX



Environmental Protection

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.