



CE

Crepe Maker

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Use the correct fixings as indicated. Do not tighten any of the nuts until the unit is completely assembled, then finish by tightening all nuts. All nuts must be tightened before use.
- Do not carry out alterations or modifications to this product.
- Do not place the appliance on or near a hot gas flame, electrical element or any other appliance.
- Do not use this appliance for anything other than its intended use.
- Persons (including children) with reduced physical, sensory and mental capacities or lack of experience and knowledge do not intend this product for use, unless persons responsible for their safety have given them supervision or instruction concerning use of the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Do Not immerse the appliance in water or any other liquid

Operating Instructions

Using Your Crepe Maker

Before using your crepe maker for the first time, peel off any packaging materials and check that the cooking plates are clean and free of dust. If necessary, wipe over with a damp cloth. For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil. When your appliance is heated for the first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety of your crepe maker.

- Place the unit on a level surface making sure it is not in contact with a wall, corner or curtains.
- Never cut crepes on the baking plate. Use only wooden or heatproof plastic utensils to avoid scratching the non-stick coating.
- Once you have plugged in your crepe maker you will notice that the red power light and the green ready light will turn on. Turn the temperature knob to MAX and the green ready light will go off, this indicates that the crepe maker is heating up.
- Allow your appliance to preheat until the green ready light goes on, this indicates the crepe maker is at the correct temperature for cooking.
- For best results, lightly spray the cooking plate with cooking oil spray before using, this will assist in the removal of the crepes after cooking.
- Once the green light has turned back on pour your crepe batter onto the baking plate spreading it with a circular movement.
- Allow the crepe to cook until the surface is no longer liquid and the crepe can be moved slightly. Using a spatula lift and flip the crepe completely.
- Continue to cook on this side until the underside is browned slightly and easily lifted.
- Adjust the temperature after the first crepe is done.

Cleaning and care

- Always turn off the power and remove the plug after and before cleaning.
- The cooking plate are coated with non-stick cooking surface; therefore, little cleaning is required. Simply wipe the cooking plate over with a damp cloth.
- Do not use abrasive scouring pads, powders or cleaners.
- Do not place in the dishwasher.
- Before next use, lightly grease the cooking plate for easy removal of cooked crepes.

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX



Environmental Protection

Products bearing the symbol shown above means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.