



LEISURE

THANK YOU FOR YOUR ORDER



Music Stand

USER MANUAL Model No: 4543


Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- This product is intended for indoor use only.
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- If at any time during the activity you feel faint, dizzy, experience pain, stop and consults your physician or doctor.
- Only use the product on flat stable ground.
- Before using the product, make sure all fastenings are tightly in place and that everything is in order, and checked periodically.
- Pinch points can cause personal injury.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Assembly Instructions

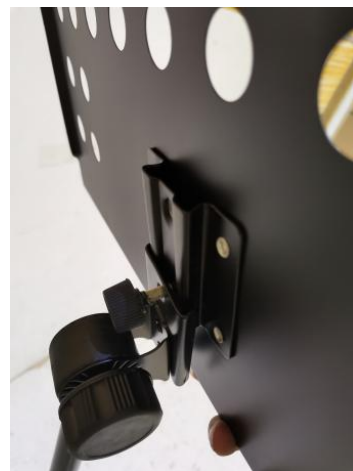

1. Unfold the feet and then tighten as shown in the image to the bottom left.
2. To raise the pole, unscrew the height adjuster that is on the lower section of the pole and raise until it gets to the desired height.
3. To change the incline or decline of the music notes holder unscrew the adjuster and move the spectrum plate to the desired angle. As shown in the second image below.
4. To fit the music notes holder to the spectrum plate, slide the back of the music notes holder into the spectrum plate and secure using the adjuster shown in the third image below.

HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55
Email: cservice@oypla.com
Live Chat: WWW.OYPLA.COM

CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

USER MANUAL Model No: 4543