



\*Colours may vary

CE

# Drum Set

# Safety Instructions

**Notice: Ensure you read and fully understand instructions before use**

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is only to be used for its designated purpose.
- This product is only suitable for children aged 3 and above.
- Never carry out any alterations or modifications to this product.
- This product is intended for indoor use only.
- Remove any packaging before giving the toy to a child.
- Only use this product on stable, level and dry ground.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials, as these will damage the product.
- Children should be supervised at all times when using the product.
- Children should be supervised by a responsible adult at all times while using this product.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)

**This product is for children aged 3 and above!**

**Product requires 4 x AA Batteries**

# Battery Warning

- Do not mix old and new Batteries.
- Do not mix Alkaline, standard or rechargeable batteries.
- Remove batteries when product is stored for a long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Non-rechargeable batteries are not to be recharged.
- Only the recommended batteries or equivalent are to be used, volts and size.
- Keep all batteries away from children.
- Batteries are to be inserted with correct polarity.
- Do not use rechargeable batteries.

**Please retain a copy of all instructions for future consultation.**



**An Official Oypla Branded Product**

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4544