



Out of this world savings.

User Manual

Model: **4675**



Camping Kitchen

Contents

| | |
|----------------------------|---|
| Safety Information | 2 |
| What's In The Box?..... | 3 |
| Assembly Instructions..... | 4 |

Safety Information

Please ensure you read and fully understand instructions before use


While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
 - Do not carry out alterations or modifications to this product.
 - Do not exceed the maximum weight limit of 20kg
 - Before using the product, make sure all fastenings are tightly in place and that
 - everything is in order, and checked periodically by an adult.
 - Keep fingers, loose clothing, and hair away when folding the product
 - **Warning! Do not exceed the maximum weight capacity of 20kg for this product.**
 - When using the product outside, be sure to only place it on dry, stable ground.
 - Leaving the product exposed to weather, especially direct sun, rain and salt air, will
 - speed the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
 - Clean only with a damp cloth. Do not use strong industrial cleaning substances or
 - abrasive materials as these will damage the look of the product.
 - If the product is damaged or has any defects, please contact cservice@oypla.com
 - **Warning! Never sit or stand on the product. Doing so may cause product failure and/or personal injury.**
-

What's In The Box?

Please note that you will be referring to the below parts list during assembly

If any of the below parts are missing or damaged, please contact our dedicated team at cservice@oypla.com.

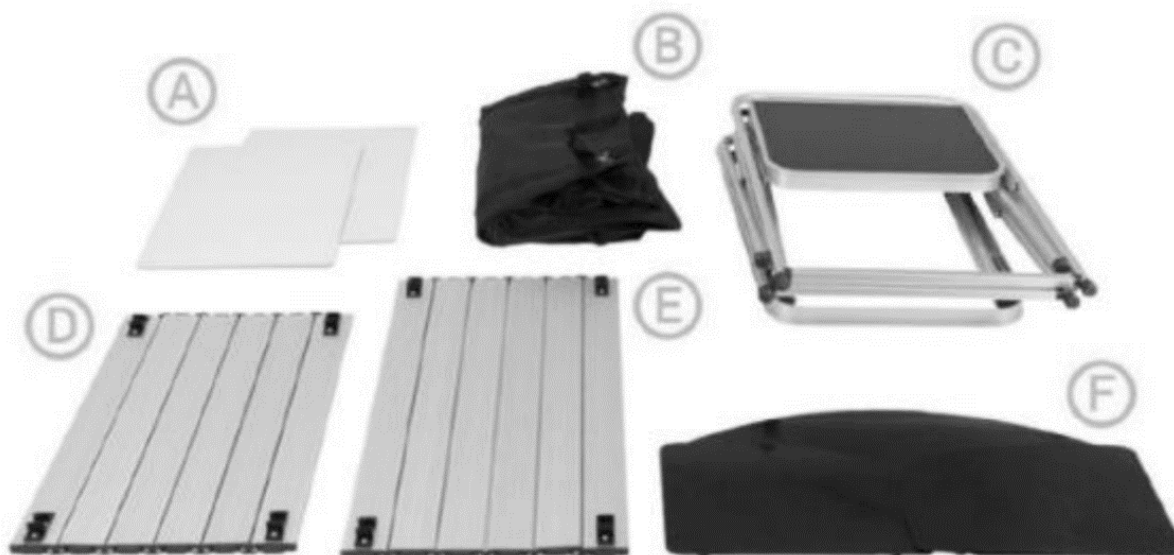

| Part | Ref. | Quantity |
|------------------|------|----------|
| Cupboard Shelves | A | 2 |
| Side Cupboard | B | 1 |
| Frame | C | 1 |
| Lower Table | D | 1 |
| Upper Table | E | 1 |
| Wind Guard | F | 1 |

ASSEMBLY INSTRUCTIONS BEGIN ON THE FOLLOWING PAGE

Assembly Instructions

Please refer to the below information to help assemble your Oypla product

If you require assistance with the assembly of your Oypla product, please contact our dedicated team at cservice@oypla.com.

1. Open the frame and lock the supports into place.



2. Clip on the side cupboards using the hooks provided.



3. Insert the two cupboard shelves (diagram follows on next page)
-



4. Attach the two metal shelves. The wind guard fixes into the pre-cut slots.



Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55

Email: cservice@oypla.com

Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

User Manual

Model Code: 4675

Oypla.com LLP / cservice@oypla.com