


OYPLA

User Manual

Model Code: 4713

Contents

- 1 Front Cover
- 2 Safety Instructions
- 4 Operating Instructions
- 5 Cleaning Instructions
- 5 Trouble Shooting
- 6 Back Cover

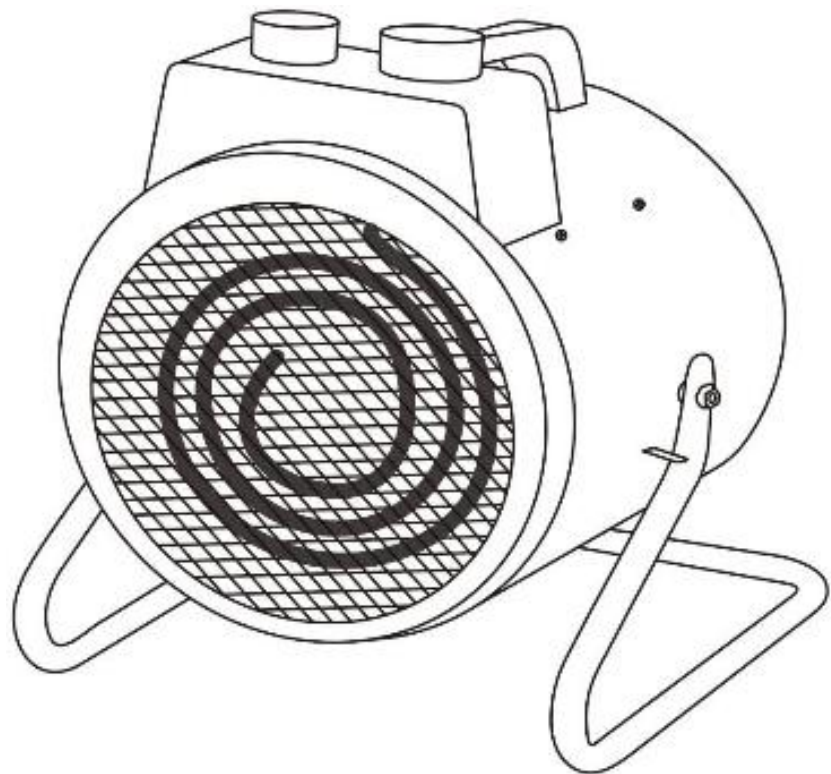

3kW Industrial Heater

Contents

1	Front Cover
2	<u>Safety Instructions</u>
4	Operating Instructions
5	Cleaning Instructions
5	Trouble Shooting
6	Back Cover

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- Never leave the product unattended whilst it is switched on. If you have to leave the product unattended, even for a short while, always switch it off.
- Keep the product out of children's reach, and do not allow children to operate it.
- Do not place the mains cable on or near any hot surface.
- Do not touch the product if your hands are moist or wet.
- Do not attempt to move the product by pulling on the power cord.
- Do not place the heater next to, or above, an electrical socket.
- Do not cover the heater in any way.
- Do not place the heater close to flammable materials or explosive gases/liquids.
- Only place the heater in a position that will allow for the flow of hot air to not be blocked.
- Always unplug the heater when it is not in use. Even at the lowest setting, the heater is still operating, making it a potential fire hazard.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these may damage the product. Make sure the product is switched off, unplugged from the socket and been left for an hour before cleaning, to remove the risk of electrical shock.
- This appliance should only be used by persons aged 8 or above.
- This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely.
- If the power cable is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person in order to avoid a hazard.
- Some parts of this product can become very hot and cause burns. Particular attention must be given where children and/or vulnerable people are present.
- When using the heater for the first time, you may notice a slight emission of smoke. This is quite normal and it will stop after a short time. The heating element is made from stainless steel and coated in protection oil during production. The smoke is caused by the oil when heated.
- This appliance is not suitable for use outdoors in damp weather, in bathrooms or in other wet or damp environments.
- The appliance can become very hot and therefore should be placed a safe distance away from any flammable objects or furniture.

Contents


1	Front Cover
2	<u>Safety</u> <u>Instructions</u>
4	Operating Instructions
5	Cleaning Instructions
5	Trouble Shooting
6	Back Cover

- The appliance must not be placed directly below a socket outlet.
- Do not connect the appliance using an on/off timer or other equipment which can automatically switch the device on.
- The appliance must not be used in rooms where flammable liquids or gases are used or stored.
- If an extension cord is used, it must be as short as possible and always be fully extended.
- Do not use the appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- Make sure the appliance is always under surveillance to keep children and animals away from it.
- Do not place the appliance on moving vehicles or somewhere easy to be tipped over.
- Never remove the plug by pulling on the cord.
- Keep the heater far away from objects such as curtains where the air inlet can easily be blocked.
- The power coupler is waterproof when not in use. In order to prevent possible electric shock or leakage current, never use the appliance with wet or damp hands, or operate the appliance when there is water, or any liquid, on the power cord.
- Always keep your work area clean and well lit. Cluttered or dark areas invite accidents.
- Appliance plug must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with the appliance.
- If operating a heater in a damp location is unavoidable, use a residual current device (RCD) protected supply.
- Avoid unintentional starting. Ensure the switch is in the off position before connecting the appliance to the power source.
- Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts and the air intake.
- Do not move the appliance when it is in operation or when plugged into the mains supply. Only move the appliance once it has cooled and it has been unplugged.
- Never point the appliance directly at persons nearby.
- Operate only on a stable, level surface.
- Warning – failure to comply with the precautions and instructions provided with this heater can result in death, serious bodily injury and property loss/damage from hazards of fire, explosions, burns, asphyxiation, carbon monoxide poisoning and/or electrical shock.
- Check the heater thoroughly for damage. Do NOT operate a damaged heater.
- Do not insert any objects through the air intake or outlet.
- Only install the heater in a normal, upright position.
- If the product is damaged or defective, please contact cservice@oypla.com.

Operating Instructions

Contents

- 1 Front Cover
- 2 Safety Instructions
- 4 Operating Instructions
- 5 Cleaning Instructions
- 5 Trouble Shooting
- 6 Back Cover

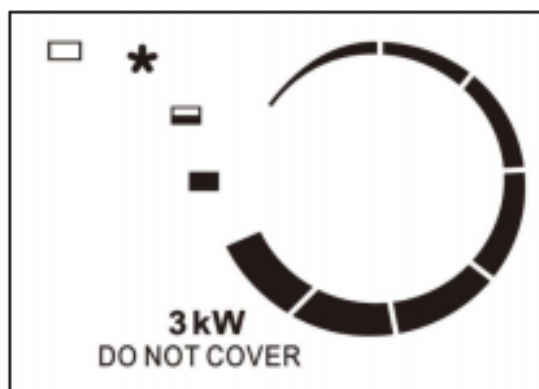

LEFT Dial: Used to select the desired setting. (fan only, fan and one heating element, fan and two heating elements).

RIGHT Dial: Thermostat Dial. (changing temperature).

Cleaning & Maintenance

Contents

1	Front Cover
2	Safety Instructions
4	Operating Instructions
5	<u>Cleaning Instructions</u>
5	<u>Trouble Shooting</u>
6	Back Cover

- Before cleaning the appliance, disconnect it from the socket and let it cool down.
- The enclosure can become dirty. Wipe it often with a slightly damp (not wet) sponge or cloth using water and soft detergents only. Never use harsh cleaning chemicals or detergents, as these may cause damage to the product.
- After cleaning, dry the appliance with a dry, clean cloth.
- Be very careful not to let the water enter the appliance at any entrance.
- Be careful not to splash water when cleaning the appliance.
- Before putting the heater away for storage, let it cool down sufficiently. Store in a plastic bag back inside its packaging box, in a well-ventilated, dry place.

Troubleshooting

Problem	Possible cause	Treatment
The heater does not operate, even when it is plugged in and the switch, thermostat are switched on .	The plug is loose, bad connection	Pull out the plug, check the connection of the plug and socket. Then connect again.
	No power in socket outlet	Insert the plug in a proper socket
The heating element glowing	The input voltage is too high or too low	Use power supply according to the rating on the label
	The air inlet grill is blocked	Keep the heater far way from articles like curtain, plastic bag, paper and other things which can cover the inlet or can be easily cover on the air inlet
The appliance didn't heat up, or only ventilator worked	The switch was not put at heating setting	Turn the switch to heat setting
	The thermostat operated	Turn the thermostat and listen if there is open/close voice. If there is no click and the thermostat is not damaged, the heater will automatic switch on when the appliance cooled down
	The self-resetting cut-out operated	Turn the heater off and inspect the blockage of inlet or outlet. Disconnect the plug and wait at least 10 minutes for the protection system to reset before attempting to restart the heater.
Abnormal noise	The appliance is not stands upright	Put the heater on a level surface

Contents

- 1 Front Cover
- 2 Safety Instructions
- 4 Operating Instructions
- 5 Cleaning Instructions
- 5 Trouble Shooting
- 6 Back Cover

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION



OYPLA.COM

An Official OYPLA Branded Product



Environmental Protection

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

Model Code: **4713**

Oypla.com LLP / www.oypla.com