

# HOME

THANK YOU FOR YOUR ORDER

## Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 3 Warnings  
-
- 3 Operating  
Instructions  
-
- 4 Before First Use  
-
- 6 Cleaning and  
Maintenance  
-
- 7 Back Cover



## 30L Mini Oven

## Contents

# Safety Instructions

## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

1 Front Cover

-

2 Safety Instructions

-

3 Warnings

-

3 Operating Instructions

-

4 Before First Use

-

6 Cleaning and Maintenance

-

7 Back Cover

End

- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- Never carry out any alterations or modifications to this product.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Never leave the mini oven unattended when in use.
- Never touch hot surfaces with your bare hands. Use oven gloves when removing hot items from the oven.
- Do not cover the crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.
- Before attempting any cleaning or maintenance, ensure the oven is fully cooled down, and not plugged in at the mains.
- Be sure that nothing touches the top or bottom elements of the oven.
- Do not store any materials other than the manufacturer's recommended accessories in this oven when not in use.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
- When the appliance is not in use, always unplug from the mains socket.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Do not let the power cable hang over any edge of the working surface, or touch hot surfaces.
- Do not operate appliance with damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- If the appliance is damaged or defective, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- Do not allow children to play with the appliance.
- The door or the outer surface may get hot when the appliance is operating.

# Contents

- 1 Front Cover
- 
- 2 Safety Instructions
- 
- 3 Warnings
- 
- 3 Operating Instructions
- 
- 4 Before First Use
- 
- 6 Cleaning and Maintenance
- 
- 7 Back Cover

# Warnings

⚠ Fires may be caused if the mini oven is covered by, or touching flammable materials such as; tea towels, paper towels, paper or curtains. Do not store flammable materials on or near the mini oven.

⚠ Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.

⚠ A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.

⚠ Do not attempt to overflow the mini oven using oversized foods or baking ware as these may cause a fire.

⚠ Do not clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, causing electrical shock.


⚠ Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.

⚠ We strongly recommend the use of oven gloves when putting food into the oven, and taking food out.



# Operating Instructions

Please refer to the diagram below for instructions on how to operate your product.

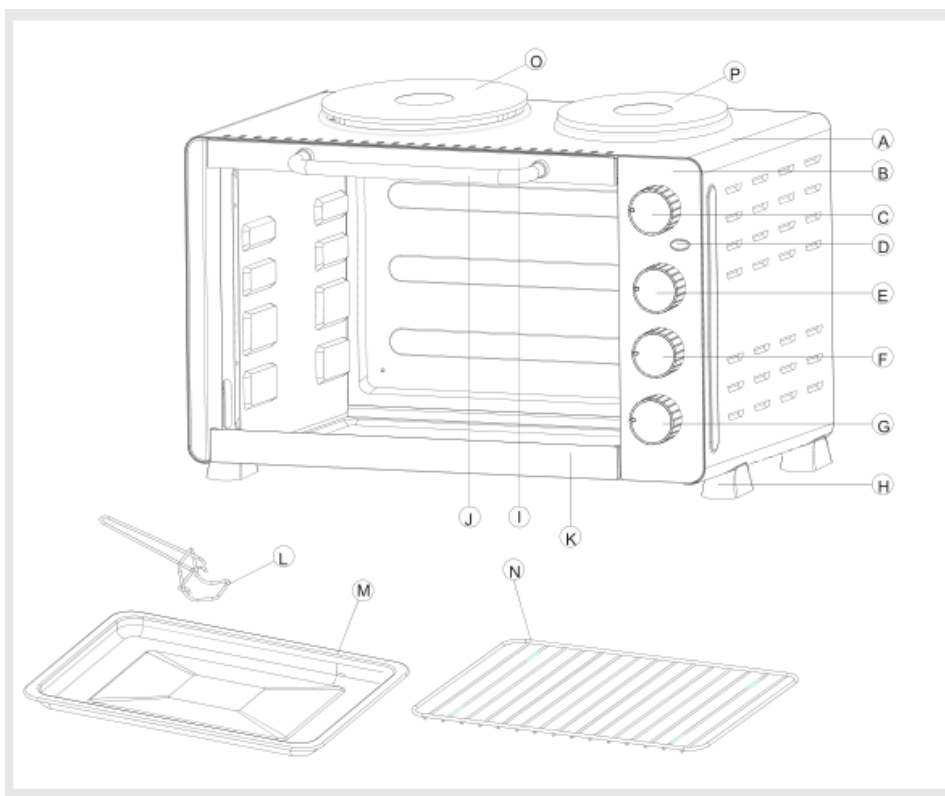

# Contents


1	Front Cover
-	-
2	Safety Instructions
-	-
3	Warnings
-	-
3	Operating Instructions
-	-
4	Before First Use
-	-
6	Cleaning and Maintenance
-	-
7	Back Cover


- |                             |                     |
|-----------------------------|---------------------|
| A) Housing                  | I) Upper Door Frame |
| B) Control Panel            | J) Handle           |
| C) Hotplates Control Knob   | K) Lower Door Frame |
| D) Indicator Light          | L) Baking Tray      |
| E) Temperature Control Knob | M) Wire Rack        |
| F) Heater Control Knob      | N) Large Hotplate   |
| G) Timer                    | O) Small Hotplate   |
| H) Oven Feet                |                     |


## Before First Use

Please familiarise yourself with the following basic oven functions and accessories, prior to first use:

- **Temperature Control:** choose the desired temperature from **100°C** to **230°C** for cooking.
- **Main Function Control:**

**Broil** (  ): on this position, the upper two heating elements can function.

**Bake** (  ): on this position, the lower two heating elements can function.

**Upper & Lower heater** (  ): on this position, both upper and lower heating elements can function together.

- **Indicator light:** It will light when the heating element is turned on.
- **Bake Tray:** For use in broiling and roasting meat, poultry, fish and various other foods. Also, can be used as a drip pan to catch the oil drippings.
- **Tray Handle:** Allows you to pick up the wire rack, and bake tray when they are hot.
- **Wire Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.

**CAUTION: TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE. ALWAYS TAKE EXTREME CARE WHEN REMOVING BAKE TRAY, WIRE RACK OR ANY HOT CONTAINER FROM A HOT OVEN, ALWAYS USE TRAY HANDLE OR OVEN MITT.**

**NOTE:** Before using the appliance for the first time, be sure to:

- 1) Read all of the instructions included in this manual.
- 2) Make sure that the oven is unplugged and the time control knob is in the "OFF" position.
- 3) Wash the accessories that accompany the oven in warm, soapy water. Dry thoroughly.
- 4) Plug the appliance into the outlet.
- 5) We recommend running the appliance at the highest temperature (230°C) on the toast function for approximately 15 minutes to eliminate any packaging residue that may remain after shipping. You may witness small amounts of smoke be produced, this is fine and normal, and is due to the manufacturing oils used during production.


# Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Warnings
-	-
3	Operating Instructions
-	-
4	Before First Use
-	-
6	Cleaning and Maintenance
-	-
7	Back Cover

## HOW TO BROIL

For best results, it is recommended that you preheat the oven for 15 minutes on 230°C.


### **Operation:**

- Place food on the wire rack and slide into the top rack position. Food should be placed as close as possible to the top heating element without touching it.
- Put back tray at the lowest rack position to catch possible dripping.
- To prevent fire hazards, it is suggested to wrap food with aluminum foil.
- Set the temperature control knob to appropriate temperature.
- Brush food with sauces or oil, as desired.
- Set function knob to "Upper heater". (  )
- Turn food over midway through the prescribed cooking time.
- To check or remove roast, use the tray handle provided to help you slide the roast in and out.
- When broiling is complete, turn the function control to "OFF" position.

## HOW TO BAKE

Please note that the BAKE function uses only the bottom heating elements. For best results, it is recommended that you preheat the oven for 15 minutes on 230°C.


### **Operation:**

- Set temperature control to appropriate temperature.
- Place the wire rack on the lowest or middle rack support guide.
- Place food on the wire rack and slide into the rack.
- Food should be placed as close as possible to the lower heating element without touching it.
- Brush food with sauces or oil, as desired.
- Turn the function control to "Lower Heater". (  )
- Turn food over midway through the prescribed cooking time.
- When baking is complete, turn the function knob to "OFF" position.

## HOW TO TOAST

Please note that the TOAST function uses all the heating elements. Large capacity oven allows for toasting 4 to 6 slices of bread, 6 muffins, frozen waffles or frozen pancakes. When toasting only 1 or 2 items, place food on the bake rack in the center of the oven.

### **Operation:**

- Place food on the wire rack and slide into the middle rack position.
- Set the Temperature Control Knob to appropriate temperature.
- Set function knob to "Upper & Lower Heater". (  )
- Ensure Back tray is in place.
- Bell will ring to signal the end of the toast cycle.
- When toasting is complete, turn function control to "OFF".

## How to use your Hotplate

### RIGHT HOT PLATE (lower wattage)

#### **Operation:**

- Place food to be cooked on the hotplate.



- Turn the right hotplate temperature control knob “ Right ” to selector right hotplate and its temperature.
- The hotplate can now function. (600W)
- When cook is complete, turn the selector to “OFF”.

### LEFT HOT PLATE (higher wattage)

#### **Operation:**

- Place food to be cooked on the hot plate



- Turn the left hotplate temperature control knob “ Left ” to selector left hotplate and its temperature.
- The hotplate can now function. (1000W)
- When cook is over, turn the selector to “OFF”.

## Cleaning & Maintenance

Please refer to the instructions below in regards to cleaning and maintaining your product.

### **CLEAN THE APPLIANCE EVERY TIME AFTER USE.**

1. Remove the plug from the wall socket and allow the appliance to cool down completely.
2. Use warm water with a small amount of washing-up liquid to clean the baking tray, the grille and the removal tool. Rinse the items with plenty of water and dry them thoroughly.
3. Use a damp cloth to clean the interior and exterior of the oven and the door. Dry them thoroughly.
4. Place all the items back in the oven and store the oven.



- make sure the plug has been removed from the plug socket before cleaning the appliance.
- Never use corrosive or scouring cleaning agents, or sharp objects (such as knives or hard brushes) to clean the appliance.
- never immerse the appliance, the power cord or the plug in water or any other fluid

## Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 3 Warnings  
-
- 3 Operating  
Instructions  
-
- 4 Before First Use  
-
- 6 Cleaning and  
Maintenance  
-
- 7 Back Cover

## Contents

- 1 Front Cover
- 
- 2 Safety Instructions
- 
- 3 Warnings
- 
- 3 Operating Instructions
- 
- 4 Before First Use
- 
- 6 Cleaning and Maintenance
- 
- 7 Back Cover



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

**Telephone:** 020 3600 22 55  
**Email:** [cservice@oypla.com](mailto:cservice@oypla.com)  
**Live Chat:** [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

## ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Manual Version: v1.0

Model Code: 4715

Oypla.com LLP / [www.oypla.com](http://www.oypla.com)