

# GARDEN

THANK YOU FOR YOUR ORDER

## Contents

- 1 **Front Cover**  
-
- 2 **Safety**  
**Instructions**  
-
- 2 **Warnings**  
-
- 3 **Assembly**  
**Instructions**  
-
- 4 **Cleaning and**  
**Maintenance**  
-
- 4 **Trouble**  
**Shooting**  
-



## Garden Water Fountain

## Contents

1	Front Cover
-	-
2	<b>Safety Instructions</b>
-	-
2	<b>Warnings</b>
-	-
3	Assembly Instructions
-	-
4	Cleaning and Maintenance
-	-
4	Trouble Shooting
-	-
4	Back Cover

End

# Safety Instructions

## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Always unplug the pump from the electric outlet before cleaning and handling the fountain.
- Use with clean water only. Do not use other liquids.
- Never let the pump run dry, as this can damage it.
- This appliance is earthed.
- Do not use the pump with water above 30 degrees Celcius.
- Do not lift, carry or pull the pump by the power cord.
- Only use this product on stable, level and dry ground.
- This product is not a toy, and is only to be used for its designated purpose.
- This fountain is to be used outdoors, but ensure that the plug remains indoors at all times.
- Do not allow children to play with the product.
- Do not replace the power cord. Stop using the pump if it is damaged.
- Plug this fountain into a RCD circuit breaker before connecting it to the mains.
- This plug is fitted with a 13-amp fuse link, which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating.
- This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed.
- If access to the fuse link is only possible by removing the plug cover, this must only be done by a suitably qualified person.
- If the plug or mains cable of this appliance is damaged, do not use it. Dispose of the appliance responsibly.
- Only use the pump that is supplied with this appliance.

## Warnings

⚠ Never allow water to make contact with the plug or cable. Doing so can create a risk of electrical shock.

⚠ Children and pets should not play with or next to this product.

⚠ Ensure you have read and understood the Safety Instructions above before using this product.

## Contents

1 Front Cover

-

2 Safety Instructions

-

2 Warnings

-

3 **Assembly Instructions**

-

4 Cleaning and Maintenance

-

4 Trouble Shooting

-

4 Back Cover

End

# Assembly Instructions

## Parts List:

- If you are missing any of the below parts, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- Please be aware that you will be referring to this parts list throughout the



1. Invert the small bucket (5) and connect the big panel (4) with the small bucket (5) by using the small screws (10).
2. Place the pump (8) into the large bucket (6) ensuring that the electrical cord is placed in the hole where the electrical cord fits in the bucket. Hold the support bar (12) in place on the underside of the large panel (4) and connect the small bucket (5) with the large bucket (6) by using the middle screws (9). Ensure the cable of the pump goes through the hole of the large panel (4).
3. Connect the handle (1) with the pole (2) using the large screws (11), and connecting the pole (2) with the small bucket (5).
4. Connect the pump (8) with the large panel (4) using the long pipe (7). Connect the large panel (4) with the small panel (3) using the short pipe (7).



Model Code: 4862

Oypla.com LLP / www.oypla.com

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Assembly Instructions
-	-
4	Cleaning and Maintenance
-	-
4	Trouble Shooting
-	-
4	Back Cover

End

## Cleaning & Maintenance

- Unplug the pump from the electrical outlet. Use a small soft brush or rinse it under running water to clean.
- Always unplug the appliance before attempting any cleaning.
- Never allow the plug or cord to become wet. Doing so may create a risk of electrical shock.
- To clean the buckets, use only a damp cloth. Do not use any harsh cleaning substances, as these may damage the product.

## Troubleshooting

If the pump fails to run, the following should be checked:

- Check the circuit breaker or try a different outlet to make sure that the pump is getting electric power.  
\*Note: always disconnect the pump from electrical outlet before checking.
- Check the pump discharge and tubing for kinks and obstructions.
- Algae buildup can be flushed out with a garden hose.
- Remove the pump front cover and plate to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- With little flow rate, the pump may spew. Check the water level to make sure the pump is completely submerged.

### HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55  
Email: [cservice@oypla.com](mailto:cservice@oypla.com)  
Live Chat: [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

### CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

### ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.

Imported by Oypla.com LLP, Hangar 1, Upwood Air Park, Ramsey, Cambs, PE26 2RA



Model Code: **4862**

Oypla.com LLP / [www.oypla.com](http://www.oypla.com)

OYPLA