

# HOME

User Manual

Model Code: 4905

THANK YOU FOR YOUR ORDER

## Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 2 Warnings  
-
- 3 Operating  
Instructions  
-
- 3 Cleaning and  
Storage  
-
- 3 Technical Data  
-
- 4 Back Cover



## 3-Tier Heated Airer

## Contents

# Safety Instructions

## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

1 Front Cover

-

2 Safety Instructions

-

2 Warnings

-

3 Operating Instructions

-

3 Cleaning and Storage

-

3 Technical Data


-


4 Back Cover


End


- Never carry out any alterations or modifications to this product.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only.
- This product is for domestic use only.
- Only use this product on stable, level and dry ground.
- Do not lean on the product.
- Keep the product out of the reach of children and pets.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- When the appliance is not in use, always unplug from the mains socket.
- It is recommended to keep the room of which the appliance is in ventilated, for example slightly opening a window.
- Ensure the power supply to the socket into which the appliance is plugged, is in accordance with the rating label on the appliance and that the socket is earthed.
- Do not use the product near any source of water.
- Do not use the product near flammable materials or liquids.
- To protect against electrical shock, do not immerse cord, plug or any part of this appliance in water or any other liquid.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Make sure the product is off, unplugged from the socket and been left for five minutes to remove the risk of electrical shock and to allow the product to cool down.
- Do not overload the product. The maximum weight capacity is 21kg.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)


## Warnings


 Do not leave this ailer on for extended periods of time unsupervised, for example overnight.

 Never allow any part of this appliance to become submerged in water. This creates a risk of electrical shock.

 If the ailer is being used to dry clothes that have colours that easily run, this may cause the product to bleach the original colour. Prevent this by wrapping the items in a towel for example before placing onto the ailer.

 Do not allow children or pets to play with this appliance. It will become hot whilst operational.

 Never fully cover the appliance, unless using a cover specifically designed for doing so.

 This ailer is meant to dry clothes washed with only water. If soap or detergent is not well removed, burn-like stains can appear on tissues.

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Operating Instructions
-	-
3	Cleaning and Storage
-	-
3	Technical Data
-	-
4	Back Cover

End

⚠ If you are placing items of clothing onto the airer whilst it is hot, be cautious of the bars, as they will become hot whilst operational.

⚠ Always wait to remove clothes after the airer has had time to sufficiently cool, approx. 1 hour.

# Operating Instructions

Please refer to the information below for instructions on how to operate your product.

1. Ensure you have fully read and understood the contents of this instruction manual.
2. Unfold the airer.
3. Place the airer upright, on a stable, level and dry surface. Ensure the power switch is set to “o” (power off).
4. Plug the appliance into a suitably rated electrical socket.
5. Press the power switch to the “I” position (power on). This will cause the airer to begin heating up.
6. After approx. 15 minutes depending on the surroundings, the heater will be at optimum temperature. Be careful not to overload the airer, the maximum weight capacity is 21kg.
7. When you are ready to switch the airer off, press the power switch to the “o” position (power off).

# Cleaning and Storage

- Always ensure the appliance is switched off, has had sufficient time to cool (around 1 hour), and has then been unplugged before performing any cleaning or maintenance. This product only requires an external regular clean.
- For best results, we suggest using a slightly damp cloth (not wet) to clean the bars and frame. Never allow water to reach the electrical components.
- Store the product in a safe, dry place, away from any gasoline or other flammable substances or items. Only fold the product once it is completely cool and unplugged, before storing it accordingly.
- After being stored for a considerable amount of time, give the airer a quick clean before using it, to prevent any risk of dust build-up creating a fire hazard.

## Technical Data

- Voltage: 220-240V ~ 50-60Hz
- Wattage: 330W
- IP Rating: IPX1

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
2	Warnings
-	-
3	Operating Instructions
-	-
3	Cleaning and Storage
-	-
3	Technical Data
-	-
4	Back Cover
	End



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

**Telephone:** 020 3600 22 55  
**Email:** [cservice@oypla.com](mailto:cservice@oypla.com)  
**Live Chat:** [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

## ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Imported by Oypla.com LLP, Hangar 1, Upwood Air Park, Ramsey, Cambs, PE26 2RA

Model Code: 4905

Oypla.com LLP / [www.oypla.com](http://www.oypla.com)