

# HOME

THANK YOU FOR YOUR ORDER

## Contents

- 1 Front Cover  
-
- 2 Safety  
Instructions  
-
- 3 Appliance  
Diagrams  
-
- 4 Prior to First  
Use
- 4 Operating  
Instructions  
-
- 5 Cleaning and  
Maintenance  
-
- 6 Back Cover

End



## Air Cooler

## Contents

# Safety Instructions

## Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

1 Front Cover

-

2 Safety Instructions

-

3 Appliance Diagrams

-

4 Prior to First Use

4 Operating Instructions

-

5 Cleaning and Maintenance

-

6 Back Cover

End

- Please ensure that you have fully read and understood the contents of this instruction manual prior to use.
- Only connect the appliance to alternate current, with a mains voltage that corresponds with the information provided on the rating label of the appliance.
- Never bend the power cord sharply or allow it to run across hot parts.
- Fully unwind the cord to prevent it from overheating.
- Do not use the appliance if the plug, cord or appliance are damaged, or if the appliance no longer functions properly or if it is damaged in any other way. If this is the case, please contact [cservice@oypla.com](mailto:cservice@oypla.com)
- Do not allow children or pets to play with the appliance. Keep out of reach of children and pets where possible.
- The appliance can be used by children of 8 years and older and persons with a limited physical, sensory or mental capacity or lack of experience or knowledge, provided they use the appliance under supervision or have been instructed about its safe use and understand the hazards involved.
- Extension cords may only be used if the mains voltage (see the information plate) and capacity are identical to or higher than that of the appliance. Always use an approved extension cord.
- Never submerge the appliance, cord or plug in water.
- This appliance is intended for household and similar use
- The white dust found inside the ice packs is water retaining crystal. This should remain inside the ice packs and should under no circumstances be consumed. If this substance is consumed, please notify a doctor immediately.
- This appliance is intended for indoor use only.
- Never place anything on top of the appliance.
- Never cover the air inlets and outlets.
- Do not insert fingers or objects in the openings of the appliance.
- This appliance should only be used with the provided cooling elements.
- Always make sure the appliance is placed on an even, flat surface.
- Do not leave the appliance unsupervised during operation.
- If you want to move the appliance, make sure the appliance is switched off.
- Never use the appliance with parts that are not recommended or supplied by the manufacturer.
- Do not pull the cord and/or appliance to remove the plug from the socket.
- Never touch the appliance with wet or damp hands.
- Never connect the appliance to an external timer or a separate remote control system, in order to prevent hazardous situations.
- The appliance may not be cleaned or maintained by children, unless this is done under supervision.
- If the appliance is not being used or is being cleaned, fully switch off the appliance by removing the plug from the socket.
- Do not make modifications to this appliance.
- Never allow water to come into contact with the plug, cord, or electrical components.

 
# Contents

- 1 Front Cover
- 
- 2 Safety Instructions
- 
- 3 Appliance Diagrams
- 
- 4 Prior to First Use
- 4 Operating Instructions
- 
- 5 Cleaning and Maintenance
- 
- 6 Back Cover


End

# Appliance Diagrams


- Please refer to the annotations below to fully understand the parts of the appliance and its remote control prior to use.

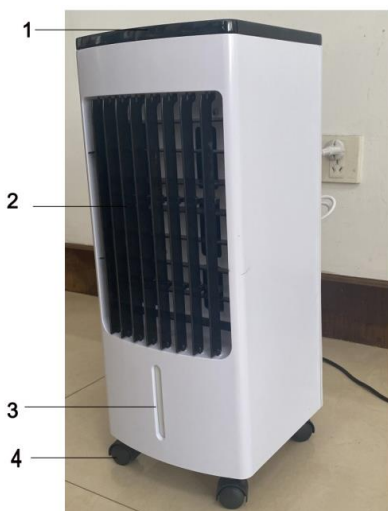

 - 1. Operating Panel
- 2. Louvre Grill
- 3. Water Level Indicator
- 4. Castor Wheels

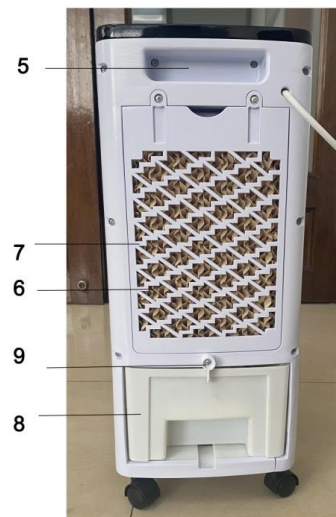

 - 5. Handle
- 6. Air Filter
- 7. Water Absorbing Filter
- 8. Water Tank
- 9. Water Tank Stopper

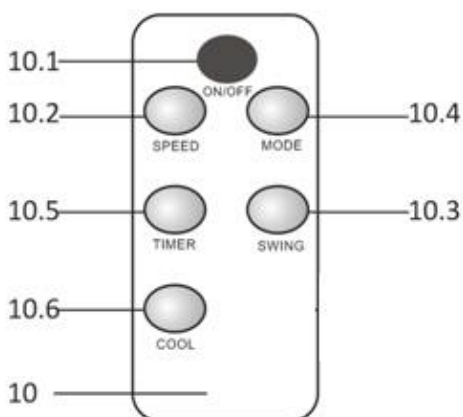

- 10.1 On/Off
- 10.2 Change Speed
- 10.3 Swing Mode
- 10.4 Change Mode
- 10.5 Timer
- 10.6 Cooling

## Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Appliance Diagrams
-	-
4	Prior to First Use
4	Operating Instructions
-	-
5	Cleaning and Maintenance
-	-
6	Back Cover

 
End

# Prior to First Use

- Please follow these instructions prior to using the appliance.
- Carefully unpack the air cooler and all accessories. Remove all packaging materials, and any promotional stickers.
- Keep the packaging until you have used the appliance, confirming that it is in full working order.
- Place the appliance on a flat, level surface and make sure there is enough space all around for sufficient ventilation.
- Check that all mentioned accessories and parts have been supplied.
- Give the outer shell of the appliance a wipe with a cloth to free it from any dust or particles it may have picked up during manufacturing and transport.
- Make sure there is minimum 30cm space all the way around the cooler. Never block air inlets or outlets.
- Plug the appliance into an appropriate socket. Once switched on, the appliance will give out a short “beep” sound. The indicator light will appear meaning the appliance is on standby.
- Always check that the water plug from the tank is in place correctly, to avoid any spillages.

# Operating Instructions

- Please refer to the diagram below for instructions on how to operate your product.

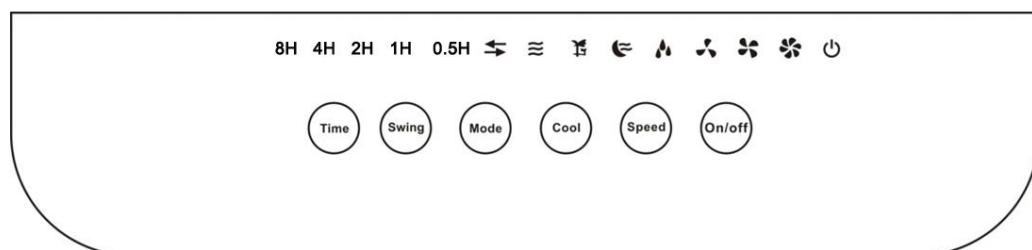

## Speed

The speed can be changed by using the “Speed” button. Using the button will cycle through the available speed options - Low, Medium and High.

## Cooling

The appliance is able to cool the air further by adding cold water to the water tank. Never overfill or underfill the tank. When the appliance is on, press the “Cool” key followed by your desired speed to activate cooling mode.

## Mode

There are various modes that can be used:



You can also activate **Swing Mode** by using the “Swing” button, for better air displacement.

**Humidification mode** can be switched on or off by pressing the “cool” button when the unit is switched on.

# Contents

1	Front Cover
-	-
2	Safety Instructions
-	-
3	Appliance Diagrams
-	-
4	Prior to First Use
4	Operating Instructions
-	-
5	Cleaning and Maintenance
-	-
6	Back Cover

End

## Timer

Each time you press the “Timer” button, 30 minutes is added to the timer, up to a maximum of 15.5 hours. For example, if you would like to set the air cooler on a timer for 5.5 hours, you must press this key until the indicator lights 0.5h + 1h + 4h = 5.5h.

If you would like to cancel the timer or set a new time, simply continue to press the timer button until all of the indicator lights are off.

# Cleaning & Maintenance

Please refer to the instructions below in regards to cleaning and maintaining your product.

- Before cleaning the appliance, you must switch it off by means of the on/off button and removing the plug from the socket.

## Cleaning the Exterior

Clean the exterior of the appliance with a cloth. The cloth may be damp, but not wet. Never allow water to enter the grille or inlets. Only water is necessary, do not use harsh cleaning detergents or chemicals as these may damage the product. Never submerge any part of the appliance in water or any other liquid.

## Cleaning the Air Filter

Over time, the air filter may gather dust or dirt. In order to allow the air cooler to function as well as possible, we recommend cleaning the air filters regularly. To do so, unscrew the air filter at the rear of the appliance and remove it. Clean the filter in lukewarm water, before thoroughly rinsing clean and leaving to air dry. We do not recommend placing the air filter in the sun or on a radiator or other heat source to dry. Once it is fully dry, it can be placed back into the appliance.

## Cleaning the Ventilation Grilles

In order to allow the air cooler to function as well as possible, you can clean the ventilation grilles by means of a vacuum cleaner with a soft brush nozzle.

## Cleaning the Water Absorbing Filter

When you have removed the air filter, you can also remove the water absorbing filter. Remove the water absorbing filter from the holder, clean it with clean water and a soft brush and then carefully place it back in the holder. Do not use detergents, as they can affect the water absorbing filter.

## Cleaning the Water Tank

The water tank can be removed. Throw away any water that is still present in the water tank and clean the tank with a soft detergent and warm water. Properly rinse with clean water and dry.

## Contents

- 1 Front Cover
- 
- 2 Safety Instructions
- 
- 3 Appliance Diagrams
- 
- 4 Prior to First Use
- 4 Operating Instructions
- 
- 5 Cleaning and Maintenance
- 
- 6 Back Cover
- End



## HAVE A QUESTION ABOUT YOUR PURCHASE?

Our dedicated customer services team are happy to help. Contact them via:

**Telephone:** 020 3600 22 55  
**Email:** [cservice@oypla.com](mailto:cservice@oypla.com)  
**Live Chat:** [WWW.OYPLA.COM](http://WWW.OYPLA.COM)

## CONSIDER THE ENVIRONMENT!

In the United Kingdom, approximately 5 billion corrugated boxes are used per year, amounting to around 83 per person! By recycling the cardboard box in which this product was packed, you contribute to the preservation and sustainability of the environment.

If you see a recycling logo on the packaging of your product, such as the below examples, that piece of packaging is recyclable. If there is not a recycling logo, please check with your local authorities before recycling.



PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

# OYPLA.COM

AN OFFICIAL OYPLA BRANDED PRODUCT

## ENVIRONMENTAL PROTECTION

Products bearing the symbol shown below means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with your national legislation.



Model Code: 4907

OYPLA

Imported by Oypla.com LLP, Uxbridge, UX8 2FX

Oypla.com LLP / [www.oypla.com](http://www.oypla.com)