

User Manual

Model: 3958



CD/DVD Travel Case

Safety Information

Please ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- Carry product only by the handle.
- Make sure product is secured and locked before moving.
- This product is not a toy, and is only to be used for its designated purpose.
- Do not carry out alterations or modifications to this product.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances.
- Keep fingers, loose clothing, and hair away when folding the product.
- Do not overload.

- This product is for domestic use only.
- Make sure hanging sleeves are correctly positioned before moving.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Keep away from fire.
- If the product is damaged or has any defects, please contact cservice@oypla.com
- Pinch points can cause personal injury.

Have a Question About Your Purchase?

Our dedicated customer services team are happy to help. Contact them via:

Telephone: 020 3600 22 55 Email: cservice@oypla.com Live Chat: www.oypla.com

Consider the Environment!

By recycling the cardboard box in which this product was packed, you contribute towards helping the environment. If you see a recycling logo such as the below on the packaging, it can be recycled. If a recycling logo is not present, please check with your local authority before recycling.









PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

An Official Oypla Branded Product Imported by Oypla.com LLP, Uxbridge, UB8 2FX