

Bathroom Cupboard

Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.


- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- This product is not a toy, and is only to be used for its designated purpose.
- This product is intended for indoor use only. Leaving the product outside exposed to weather, especially direct sun and rain, will speed the weathering process. This can be slowed by removing the product from these conditions.
- Do not carry out alterations or modifications to this product.
- Clean only with a damp cloth. Do not use abrasive cleaners or detergents.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Keep fingers, loose clothing, and hair away when closing the lid of the product. Pinch points can cause personal injury.
- This product contains small parts that could be a choking hazard if swallowed. Keep these items away from children.
- Use the correct fixings as indicated. Do not tighten any of the nuts until the unit is completely assembled, then finish by tightening all nuts. All nuts must be tightened before use.
- Keep away from fire.
- If the product is damaged or has any defects, please contact cservice@oypla.com










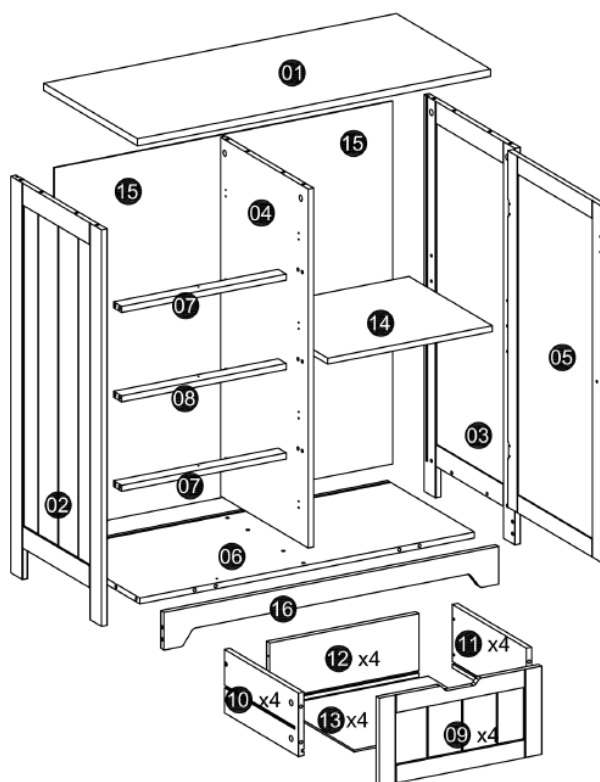










Operating Instructions

Parts List:









If you are missing any of the below parts please contact cservice@oypla.com

Please be aware that you will be referring to this parts list throughout the assembly process.




A CAM lock dowel x32 	B CAM lock x32 	C Wood dowel x26  $\varnothing 6 \times 30\text{mm}$	D Drawer rail x8 	E Screw x8 
F Neil leg x4 	G Screw x50 	H Drawer block x4 	I Washer x4 	J Anti-falling x2 
K Screw x20 	L Wall anchor x2 	M Rear panel hook x8 	N Stickers x32 	O Magnetic catch x1 
P Washer x1 	Q Handle x1 	R Bolt x1 	S Shelf support x4 	T Hinge x2 


1. Insert dowels (C) into the holes shown in the cabinet base (6). Insert cam lock dowels (A) into the underside of the cabinet top (1).
2. Attach four drawer rails (D) onto the left-hand side panel (2) and partition panel (4) using two screws (G) each. Insert dowels and cam lock dowels into the positions shown on the partition and side panels.
3. Insert dowels and cam lock dowels into the positions shown on the right-hand side panel (3) and front panel (16). Insert two dowels into each end of the drawer supports (7 & 8).
4. Attach the front panel to the base by first inserting cam locks (B) into the holes. Push the front panel into place and secure by turning the cam locks with a screwdriver.
5. Attach the partition panel to the base and secure using two screws (K).
6. Attach the drawer supports to the partition, using a cam lock for the middle support.
7. Attach the left-hand panel to the assembled base and partition section. Make sure that the drawer supports are all properly aligned with the pre-drilled holes.
8. Attach the right-hand side panel to the assembled base.
9. Attach the rear panels (15) by sliding them into the grooves in the side and partition panels. Attach the feet (F) to the bottom of the side panels.
10. Attach the cupboard top using a cam lock in each corner and at the top of the partition panel.
11. To secure the rear panels, attach the panel hooks (M) on each edge, using one screw (E) each.
12. Attach the magnetic catch (O) using two screws and attach the drawer blocks (H) using one screw each.
13. Insert four cam dowels into the drawer front (9).
14. Attach the drawer sides (10 & 11) to the back (12) using two screws on each side.
15. Attach the drawer base (13) by sliding it into the grooves in the sides.
16. Attach the front of the drawer using two cam locks on either side.
17. Slide the drawers into the assembled cabinet.
18. Insert shelf support pegs (S) at the desired height.
19. Slide the shelf (14) into place on top of the support pegs.
20. Attach the hinges (T) and washer (P) to the back of the door using two screws each and attach the handle (Q) by using the bolt (R).
21. Attach the door to the cupboard by screwing the hinges to the inside of the side panel.
22. Attach the wall plates (J) to the back of the cupboard using a screw and washer (I).
23. Secure the cupboard to the wall using a screw, washer and rawl plug (L).

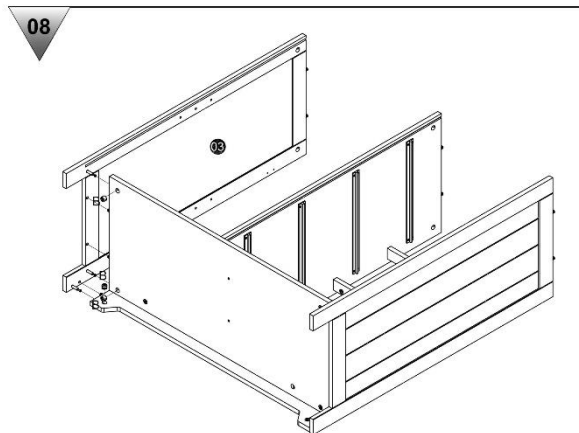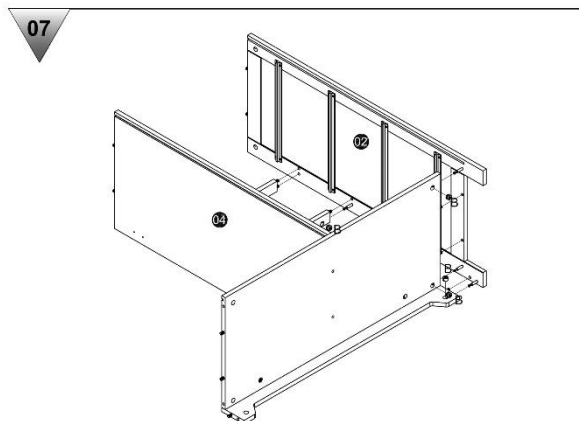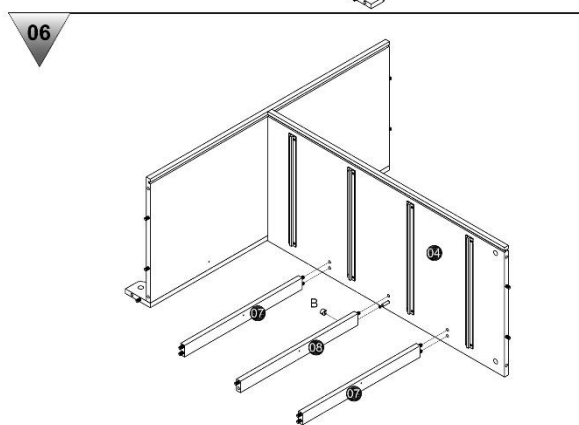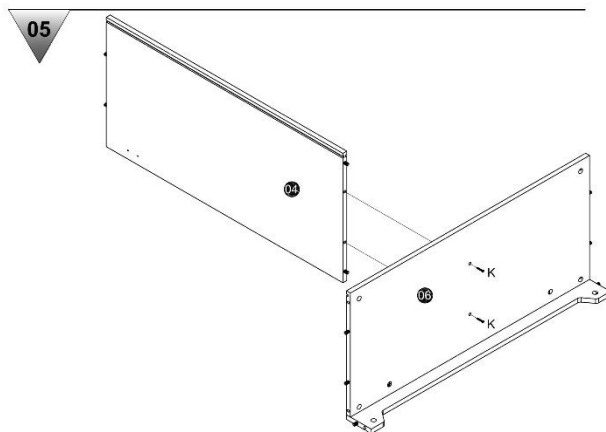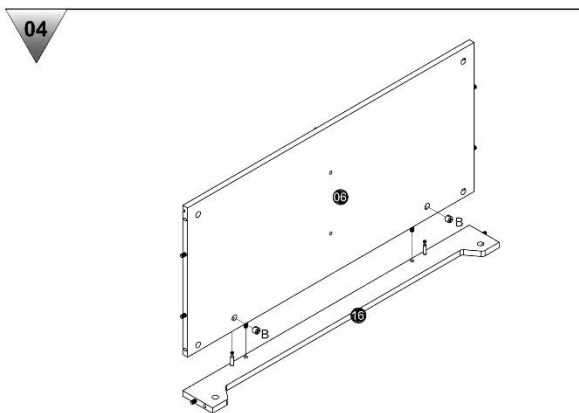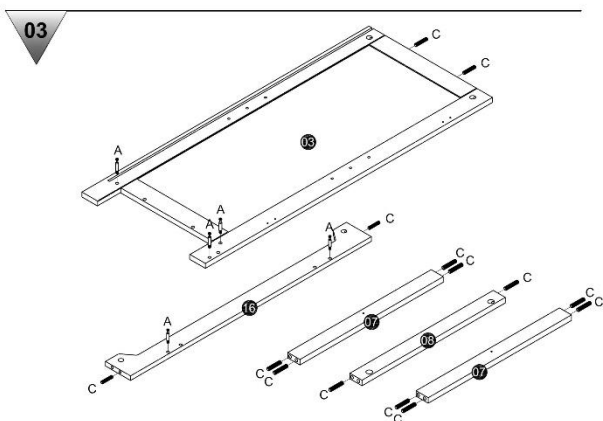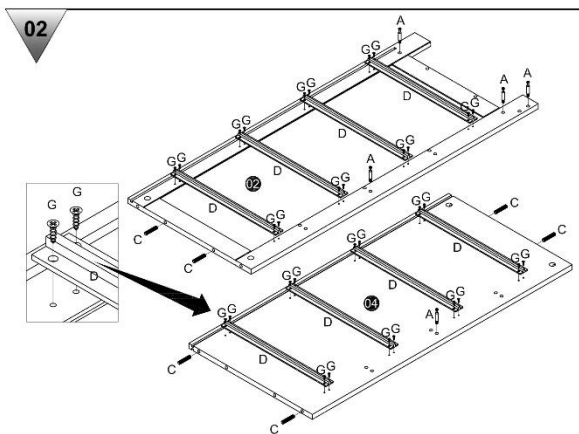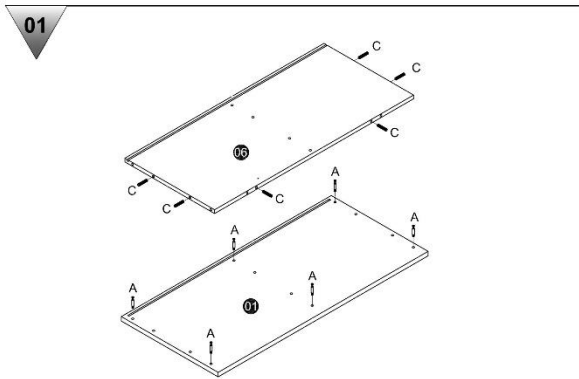


09

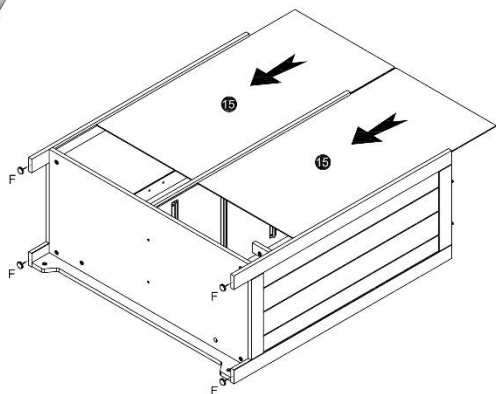


13

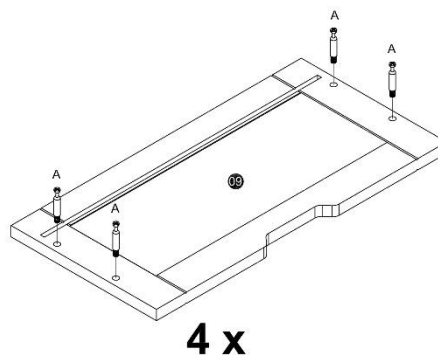


10

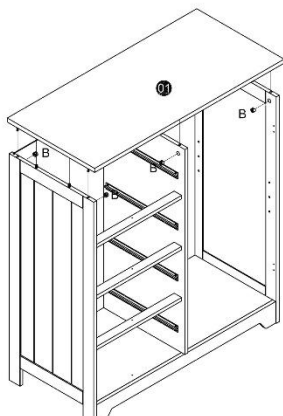


14

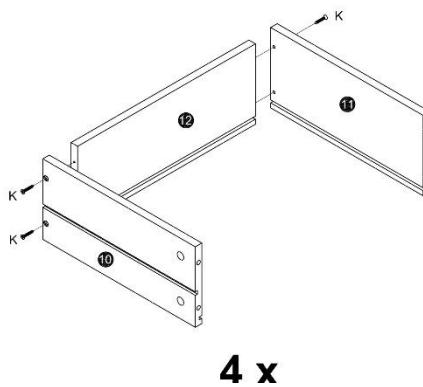


11

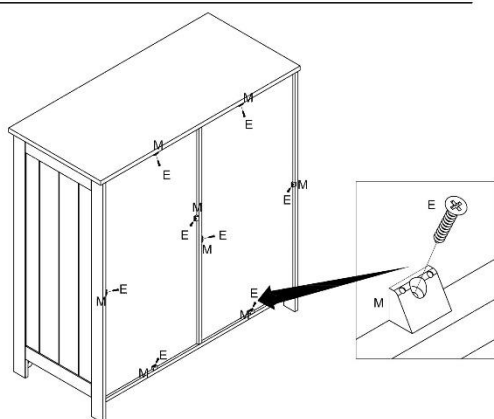


15

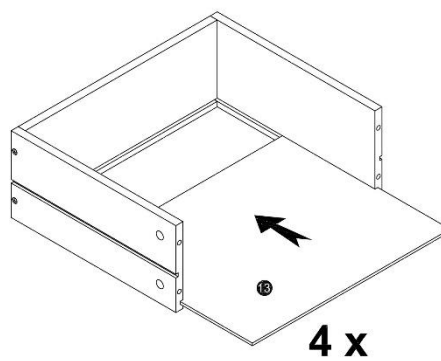


12

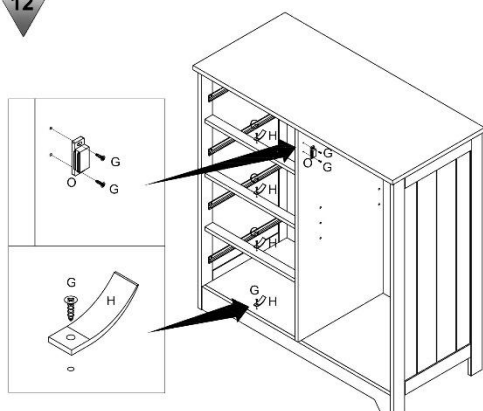

16

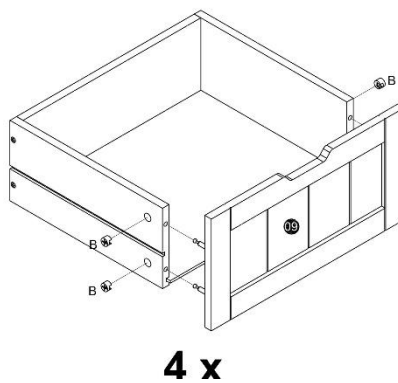

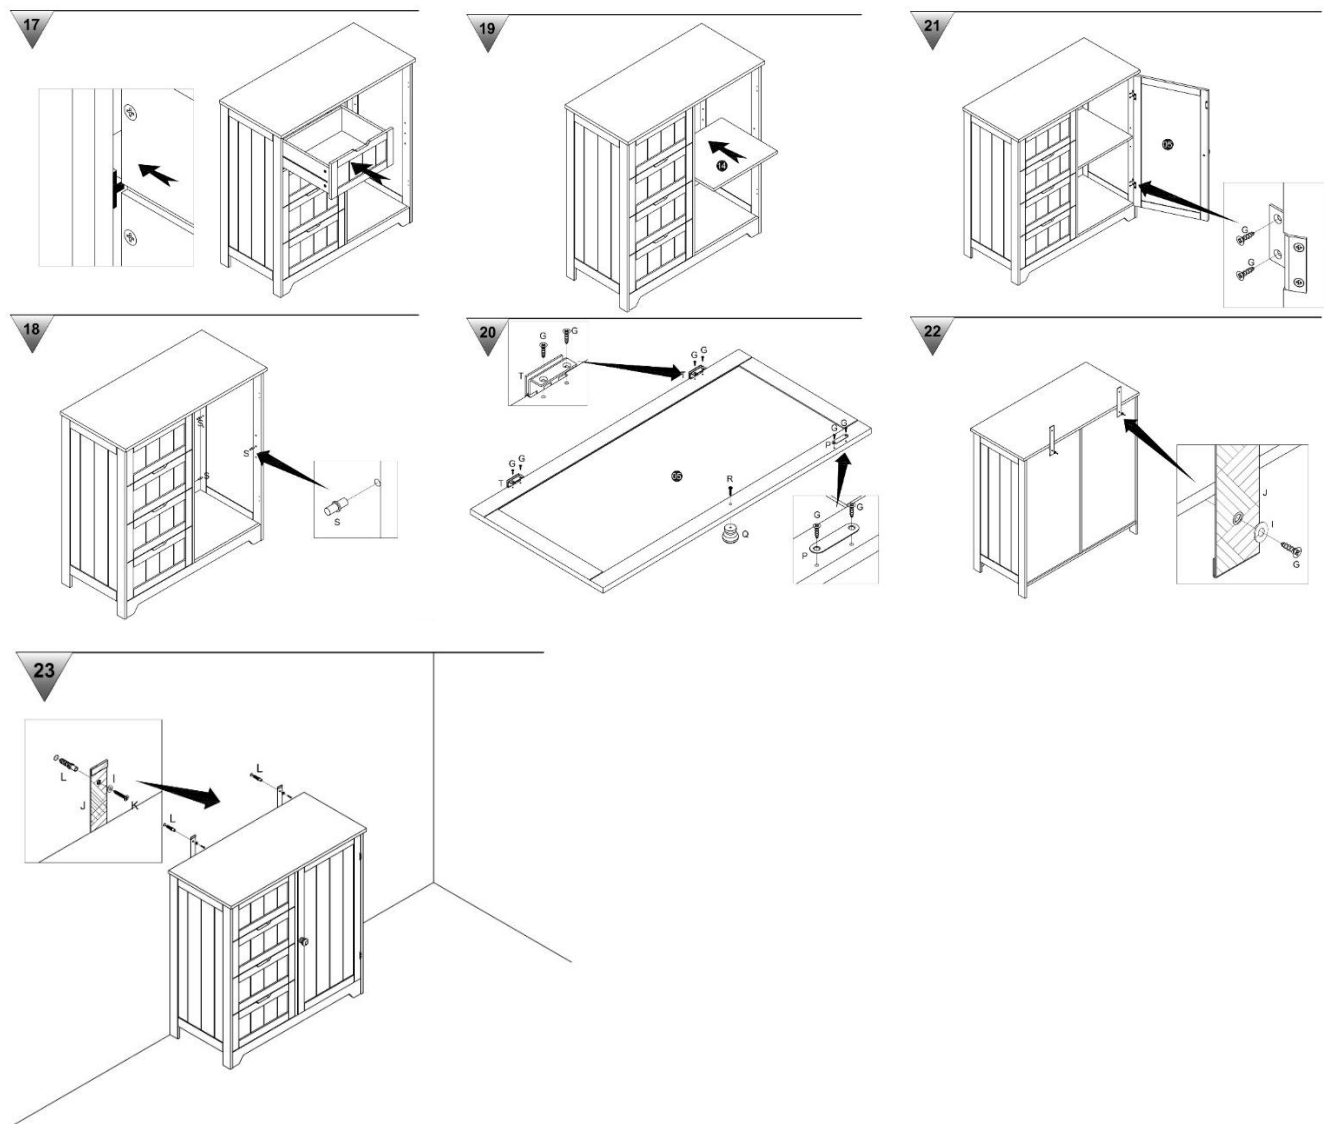

HAVE A QUESTION ABOUT YOUR PURCHASE?

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: cservice@oypla.com

LIVE CHAT: www.oypla.com

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

OYPLA.COM

An Official OYPLA Branded Product

Imported by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 4335