



Foot Operated Log Splitter


Safety Instructions

Notice: Ensure you read and fully understand instructions before use

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.



- Make sure all fastenings are tightly in place and that everything is in order before using the product. This should be checked periodically by an adult.
- Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.
- Use the correct fixings as indicated. Do not tighten any of the nuts until the unit is completely assembled, then finish by tightening all nuts. All nuts must be tightened before use.
- Do not carry out alterations or modifications to this product.
- Persons (including children) with reduced physical, sensory and mental capacities or lack of experience and knowledge do not intend this product for use, unless persons responsible for their safety have given them supervision or instruction concerning use of the product.
- DO NOT use the log splitter for a task it is not designed to perform.
- DO NOT operate the log splitter if damaged.
- Wear protective gloves.
- Always wear safety goggles. Everyday spectacles are not sufficient protection.
- The log splitter must always be operated by one person only. Other people must keep a safe distance from the log splitter, especially when it is in operation.
- DO NOT operate the log splitter when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- DO NOT allow untrained persons to operate the log splitter.
- DO NOT operate the log splitter in wet or damp areas or expose it to rain.
- If the product is damaged or has any defects, please contact cservice@oypla.com

Operating Instructions

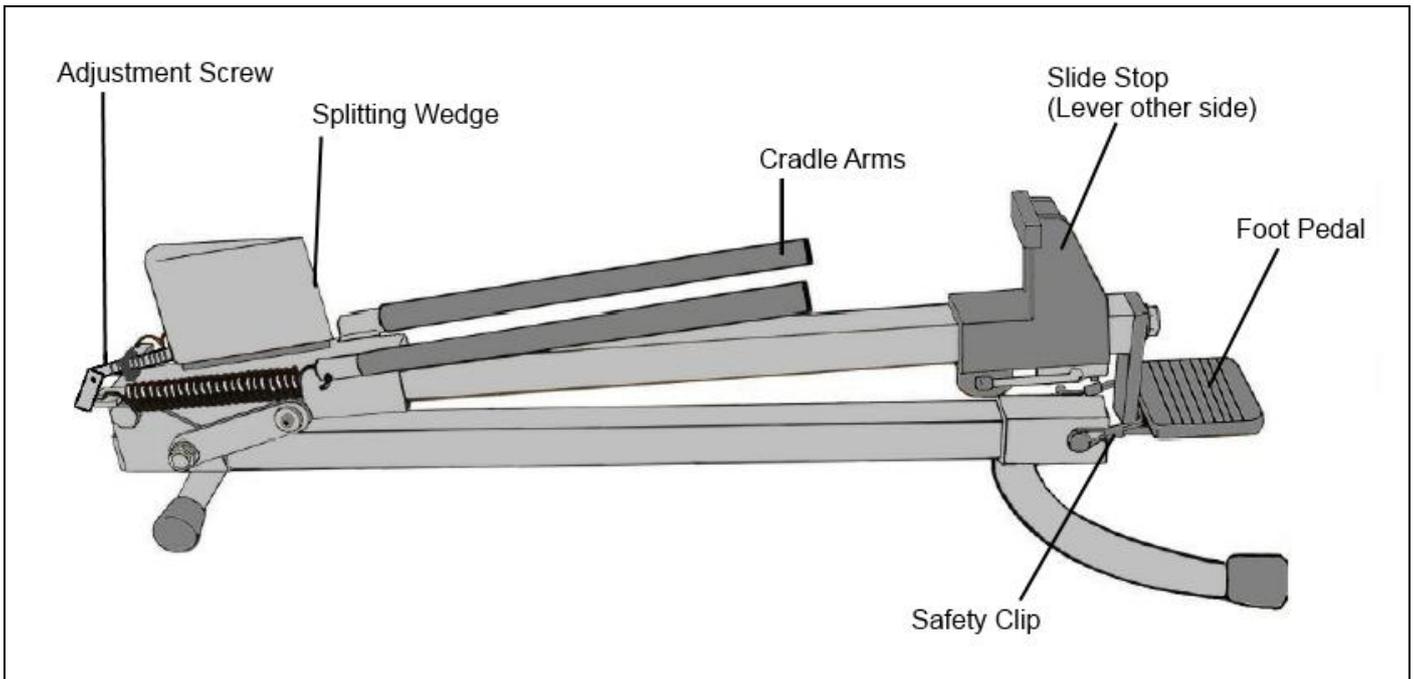


WARNING! The foot pedal is under tension. Before removing the safety clip, put your hand on the pedal to prevent it flying up and injuring you.

Assembly: To assemble, ensure the adjustment screw is wound all the way in and is touching the back of the splitter head. Remove the safety clip and fit the foot assembly. Refit the safety clip and hook it over the foot pedal; the log splitter is now ready to use.

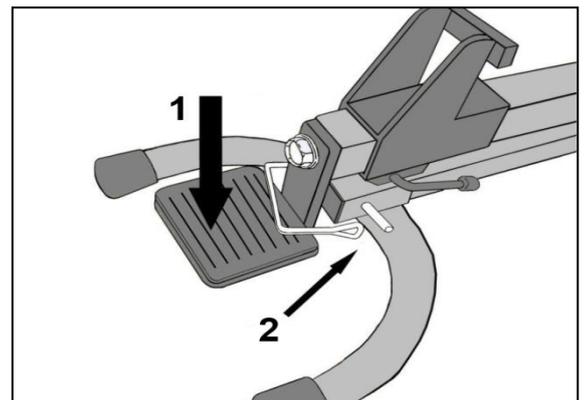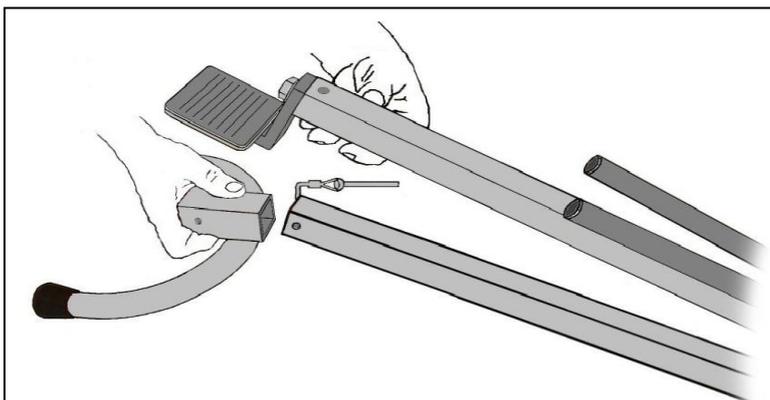


Adjusting the Working Height: Remove the safety clip and adjust the foot pedal height to at least 33cm (13 inches) by screwing the adjustment screw out (anticlockwise) to raise the foot pedal and in (clockwise) to lower the foot pedal.

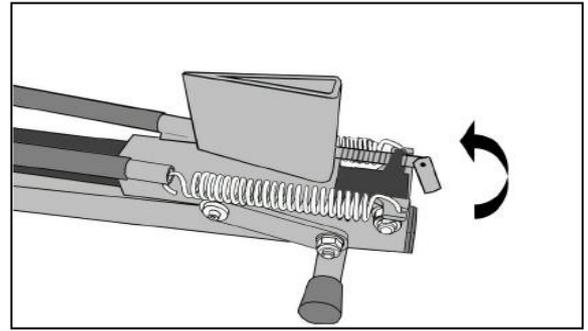

Splitting Logs

Tips: Wet or non-seasoned wood is more difficult to split than dry wood because the fibres stick together. Reversing the log and splitting it from the other end may help if you cannot pull the wood apart. Large or multiple knots in a log make splitting more difficult. Usually if the log is rotated so the knots are vertical to the blade, the wood will split more easily and less stress is placed on the splitter. This will reduce wear and tear and the possibility of damaging components of the splitter.

1. Remove the safety cover from the splitting wedge. Select your log and lift the slide stop lever to allow it to be moved along the bar. Lay the log on the splitter and push the slide stop onto the end of the log.
2. Pump the foot pedal down, it may take three or four pumps, until the log is split.
3. To remove a log from the splitter that has not been split all the way through, lift the lever on the slide stop and pull it back, place your foot on the bottom bar and pull the end of the log sideways towards you.
4. When finished fit the safety cover and safety clip, wind in the adjustment screw and store in a safe, childproof location.
5. Keep moving parts lubricated with anti-rust machine oil.

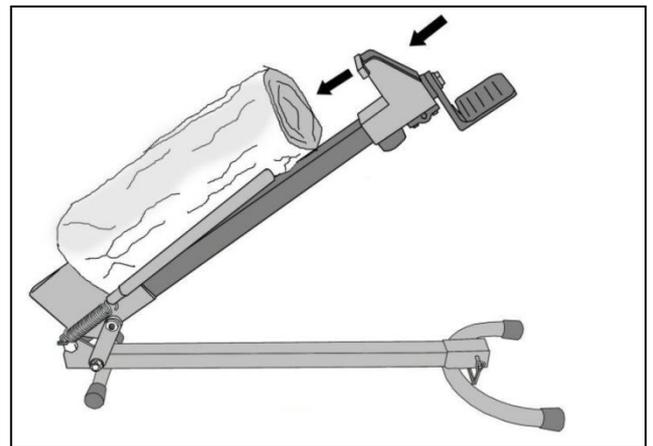

Please retain a copy of all instructions for future consultation.



An Official Oypla Branded Product

Imported into the EU by Oypla.com LLP, Uxbridge, UB8 2FX

USER MANUAL Model No: 3133