

# OYPLA<sup>TM</sup> DIY



## 150kg Motorcycle Lift

USER MANUAL Model No: 3988

# Safety Instructions

## **Notice: Ensure you read and fully understand instructions before use**

While every attempt is made to ensure the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.

- This product is not a toy, and is only to be used for its designated purpose.
- Never carry out any alterations or modifications to this product.
- Only use this product on stable, level and dry ground.
- Always keep your hands and feet away from the immediate working area.
- Before using the product, make sure all fastenings are tightly in place and that everything is in order, and checked periodically.
- This product includes small parts that could cause choking.
- Leaving this product outside exposed to weather, especially direct sun, rain and salt air, will speed with the weathering process. This can be slowed by removing the product from these conditions, or covering it with a suitable cover.
- When not in use the lift must be stored in the lowest position in a dry location.
- This product is not intended for use by persons (including children) with reduced physical, sensory and mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by persons responsible for their safety.
- Clean only with a damp cloth. Do not use strong industrial cleaning substances or abrasive materials as these will damage the product. Do this regularly to keep the product clean of any oil or grease.
- If the product is damaged or has any defects, please contact [cservice@oypla.com](mailto:cservice@oypla.com)


**DO NOT EXCEED THE MAXIMUM WEIGHT LIMIT OF 150KG**




# Operating Instructions

## Parts List:

If you are missing any of the below parts please contact [cservice@oypla.com](mailto:cservice@oypla.com)

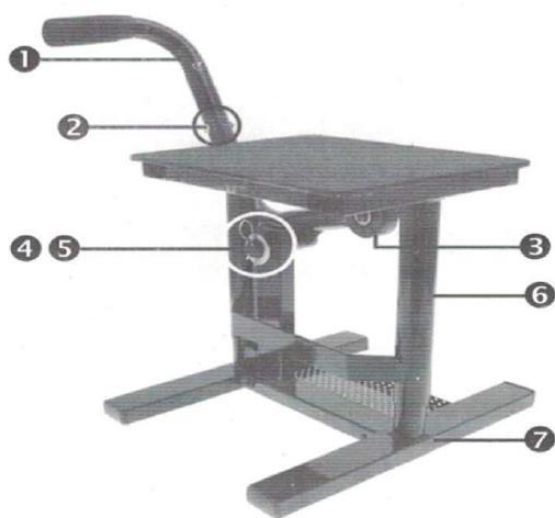
Please be aware that you will be referring to this parts list throughout the assembly process.




Part		Description	Qty.
1		Pedal	1
2		Bolt (M6 x 35) w/ Nut (M6)	1
3		Pedal Arm w/ Wheel	1
4		Pin	1
5		Washer (21 x 37)	1
6		Platform	1
7		Base	1



**1.** Install the pedal arm (3) onto the base (7). The roller on the pedal arm should sit next to the tool tray.

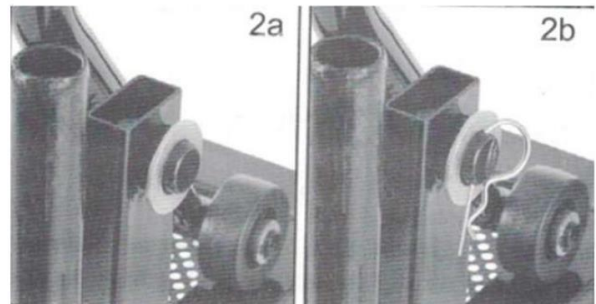

**2.** Attach the pedal arm by placing a washer (5) on the mounting shaft and secure using a pin (4).

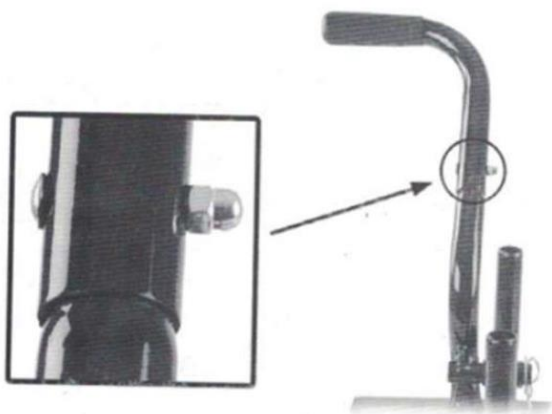

**3.** Attach the pedal (1) onto the pedal arm using the nut and bolt (2).



**4.** Attach the platform (6) to the base by sliding onto the stand support tubes.

**HAVE A QUESTION ABOUT YOUR PURCHASE?**

OUR DEDICATED CUSTOMER SERVICES TEAM ARE HAPPY TO HELP  
CONTACT THEM VIA:

TELEPHONE: 020 3600 2255

EMAIL: [cservice@oypla.com](mailto:cservice@oypla.com)

LIVE CHAT: [www.oypla.com](http://www.oypla.com)

PLEASE RETAIN A COPY OF THESE INSTRUCTIONS FOR FUTURE CONSULTATION

**OYPLA.COM**

An Official OYPLA Branded Product



Imported by Oypla.com LLP, Uxbridge, UB8 2FX

**USER MANUAL Model No: 3988**

